


# Firmware update procedure

## Model: AG-GH4 & AG-YAGH series

This update instructions describe a procedure to update AG-GH4 camera body and AG-YAGH interface unit. If you do not need to update AG-YAGH, please proceed the procedure without connecting the AG-YAGH.

### 1. Checking firmware version

1. Connect the AG-YAGH interface unit to the AG-GH4 camera body, then switch ON the camera. *Connecting HDMI line from the camera to the interface unit is not needed.*
2. MENU > “SETUP” > “VERSION DISP” to display the version information.

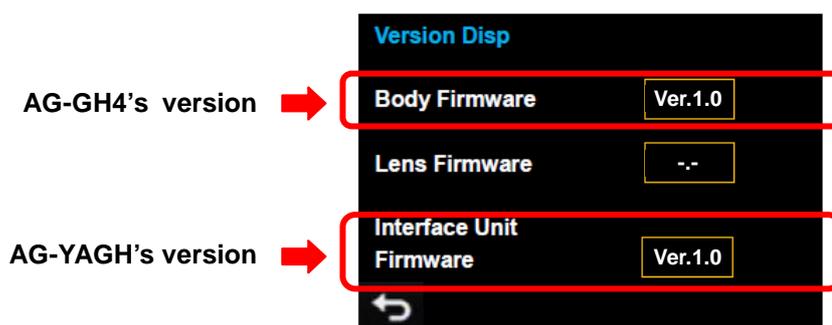

Version display example

### 2. Updating firmware

#### [Preparation]

1. Format an SD card (from 8MB to 64GB) with the camera.
2. Download a firmware package from the professional video support site at [http://panasonic.biz/sav/pass\\_e](http://panasonic.biz/sav/pass_e).
3. Extract the ZIP package, and then copy the extracted two firmware (“.ebn” file for AG-YAGH and “.bin” file for AG-GH4) to the root (upper directory) of the SD card.


#### [Performing update]

4. Insert the SD card into the SD card slot on the camera. And make sure that an HDMI cable is not connected between AG-YAGH interface unit and AG-GH4 camera body. Disconnect it if connected.

#### Updating AG-GH4

**Note:** When the firmware version running on the AG-GH4 is the same or newer than the version in the SD card, the step 6 and 7 will be skipped automatically (proceed to step 8 in this case).

5. Switch ON the camera, and press the “PLAY”  button to go to update mode.
6. At the “Version up” screen, tap “Yes” to execute.

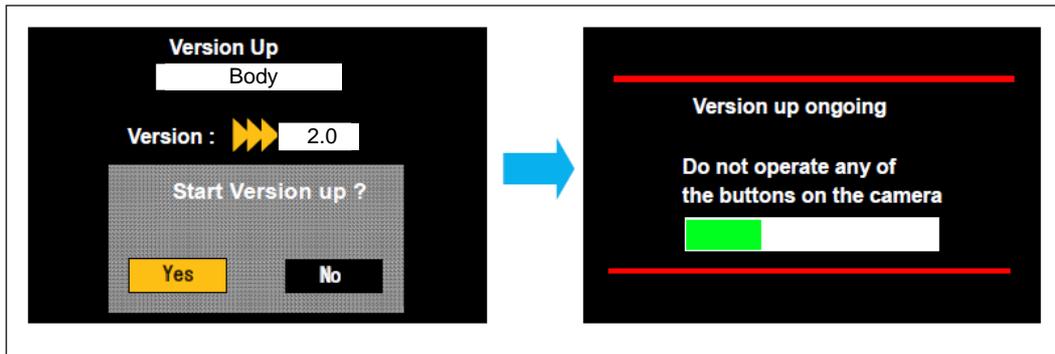


7. When the progress bar reaches at the end, camera automatically switch OFF>ON. Update work may take approximately 5 minutes.

#### Updating AG-YAGH

**Note:** When the firmware version running on the AG-YAGH is the same or newer than the version stored in the SD card, the step 9 and 10 will be skipped automatically.

8. Make sure that the camera is switched ON, and press the “PLAY”  button to go to update mode.

9. At the “Version Up” screen, tap “Yes” to execute.

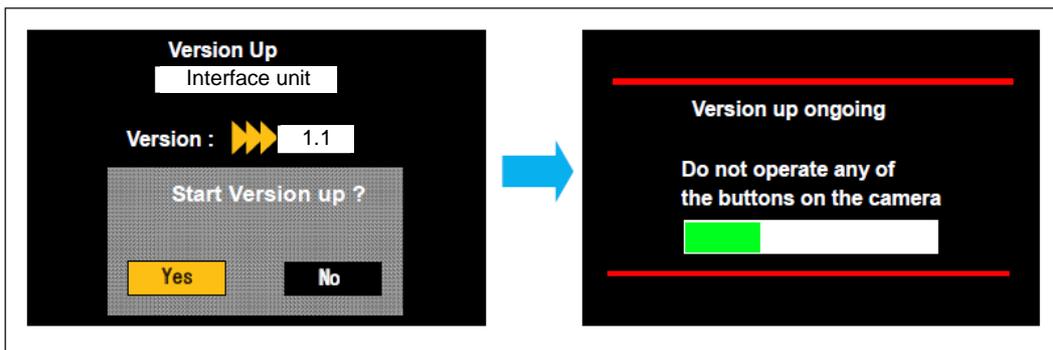

10. When the progress bar reaches at the end, camera automatically switch OFF>ON. Update work may take approximately 5 minutes.

11. Make sure that the firmware version(s) is updated.

#### **CAUTION:**

Do NOT switch OFF or eject the SD card while update is in progress, interrupting communication between SD card and equipment may cause unrecoverable failure.