

# List of Supported Functions


When you connect and use this unit with the AK-UB300G Multi-Purpose Camera, the functionality of some of the unit's buttons and dials will be limited or disabled. Please see the chart below.

**NOTE**

- To connect with the AK-UB300G, set [CAMERA TYPE(CNTRL TYPE)] on the screen of the [Camera List] tab in ROP Setup Software to "Network(AW)".

## Front panel 1


✓: Enabled ×: Disabled △: Enabled under certain conditions

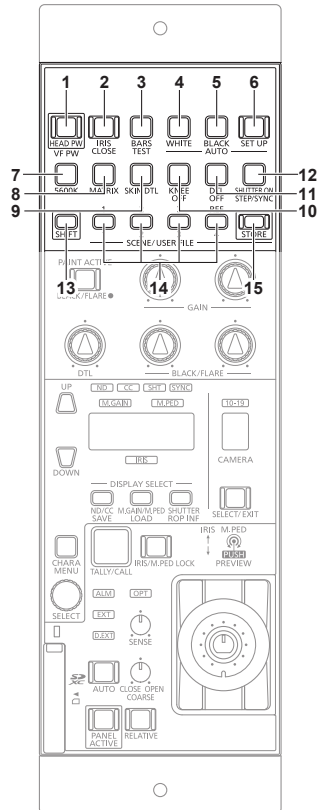

No.	Button name	Link with AK-UB300	Notes
1	[HEAD PW/VF PW] button	×	
2	[IRIS CLOSE] button	×	
3	[BARS/TEST] button	△	Only on/off of the color bar signal will function.
4	[AUTO WHITE] button	✓	
5	[AUTO BLACK] button	✓	
6	[AUTO SET UP] button	×	
7	[5600K] button	×	
8	[MATRIX] button	✓	
9	[SKIN DTL] button	✓	
10	[KNEE OFF] button	△	When this button is turned on, "MANUAL" is set for the knee function.
11	[DTL OFF] button	✓	
12	[SHUTTER ON] (STEP/SYNC) button	✓	
13	[SHIFT] button	✓	
14	[1]/[2]/[3]/[4] (SCENE/USER FILE) buttons	△	Only the scene files can be selected. The [1]/[2]/[3]/[4] buttons correspond to [SCENE1] to [SCENE4] on the camera.
15	[STORE] button	△	Only the scene files can be registered. The registered scene files are saved under the following names to the AK-UB300. [1]: SCENE1 _____ [2]: SCENE2 _____ [3]: SCENE3 _____ [4]: SCENE4 _____

■ Front panel 2


✓: Enabled ×: Disabled △: Enabled under certain conditions

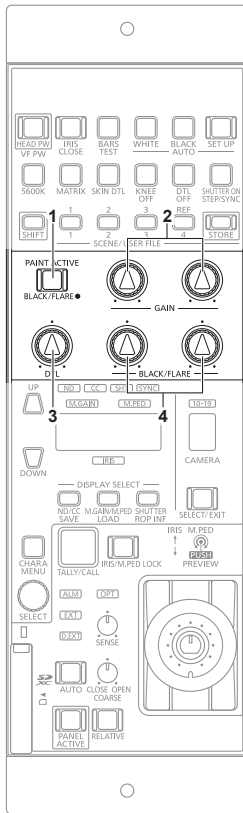

No.	Button name	Link with AK-UB300	Notes
1	[BLACK/FLARE] (PAINT ACTIVE) button	✓	
2	[GAIN] dials (red and blue)	✓	
3	[DTL] dial	✓	
4	[BLACK/FLARE] dials (red and blue)	✓	

■ Front panel 3


✓: Enabled ×: Disabled △: Enabled under certain conditions

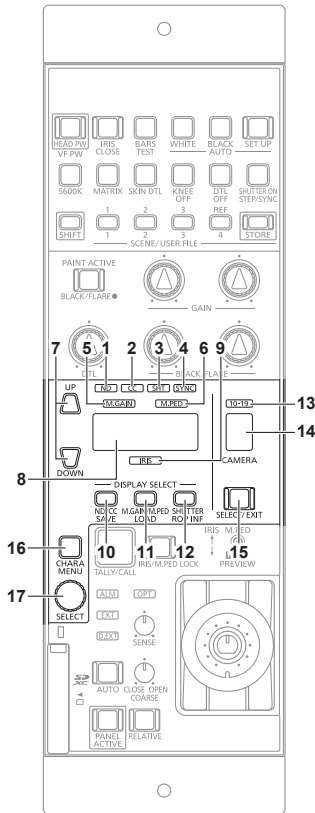

No.	Button name	Link with AK-UB300	Notes
1	[ND] indicator	✓	
2	[CC] indicator	×	
3	[SHT] indicator	✓	
4	[SYNC] indicator	△	The setting value of the sync shutter cannot be operated. "----" is displayed on the adjustment value display.
5	[M.GAIN] indicator	✓	The setting of "GAIN SELECT" is switched with the [UP/DOWN] buttons. The display on the adjustment value display is as follows. LOW: 1                    S.GAIN1: ≡.1 MID: 2                    S.GAIN2: ≡.2 HIGH: 3                   S.GAIN3: ≡.3
6	[M.PED] indicator	✓	
7	[UP/DOWN] buttons	✓	Operates the zoom and focus of the lens during "ZOOM" and "FOCUS" operation.
8	Adjustment value display	✓	
9	[IRIS] indicator	✓	
10	[ND/CC] (SAVE) button	△	When you press this button repeatedly, the operation target switches in the order of ND filter → ZOOM → FOCUS → AUTO FOCUS → ND filter.  For "ZOOM" and "FOCUS", operate the zoom and focus of the lens with the [UP/DOWN] buttons and adjust the speed value with the [SELECT] dial. The display on the adjustment value display is as follows. ZOOM: Zo** FOCUS: Fo** (**: Speed value)  "AUTO FOCUS" cannot be used. "AF.oF" is displayed on the adjustment value display.  Only the following operations will function for the SAVE menu. • Saving a connection configuration file • Saving a unit ROP configuration file • Formatting a memory card
11	[M.GAIN/M.PED] (LOAD) button	△	Only the following operations will function for the LOAD menu. • Loading a connection configuration file • Loading a unit ROP configuration file • Updating the software of the unit • Formatting a memory card

■ Front panel 3 (continued)


✓: Enabled ×: Disabled △: Enabled under certain conditions

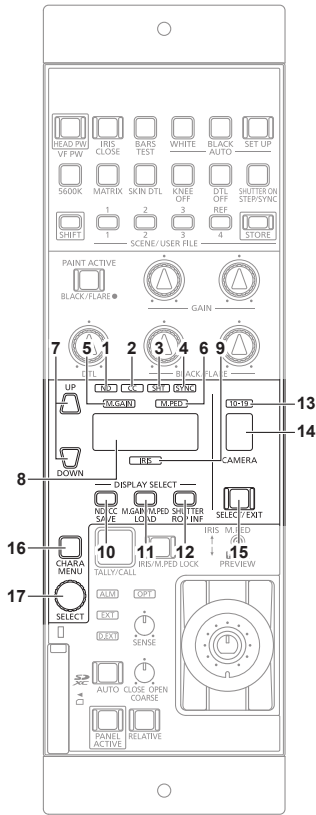

No.	Button name	Link with AK-UB300	Notes
12	[SHUTTER] (ROP INF) button	✓	
13	[10 -19] indicator	✓	
14	Camera control number display	✓	
15	[SELECT/EXIT] button	✓	
16	[CHARA/MENU] button	△	Only on/off of the camera menu by pressing and holding down will function. Operation of the camera menu is performed with the [SELECT] dial.
17	[SELECT] dial	✓	When the camera menu is displayed: Operates the camera menu. When operating “ZOOM” and “FOCUS”: Adjusts the speed value. When the camera menu is displayed, operation of the camera menu is given priority. To use for another operation, set display of the camera menu to off with the [CHARA/MENU] button.

■ Front panel 4

✓: Enabled ×: Disabled △: Enabled under certain conditions

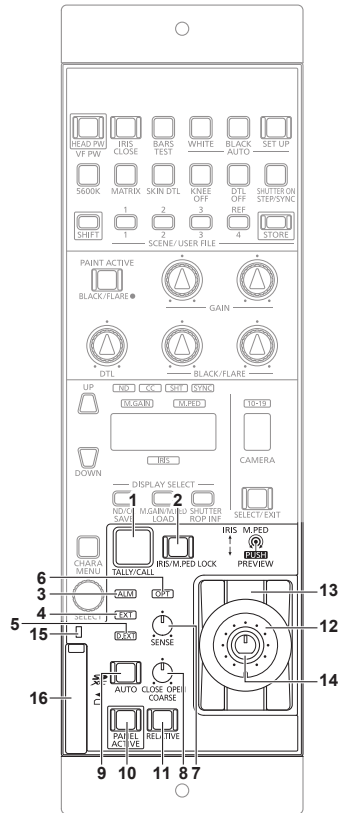

No.	Button name	Link with AK-UB300	Notes
1	[TALLY/CALL] button	△	Only red tally display functions.
2	[IRIS/M.PED LOCK] button	✓	
3	[ALM] indicator	✓	
4	[EXT] indicator	×	
5	[D.EXT] indicator	✓	
6	[OPT] indicator	×	
7	[SENSE] dial	✓	
8	[COARSE] dial	✓	
9	[AUTO] button	✓	
10	[PANEL ACTIVE] button	✓	
11	[RELATIVE] button	✓	
12	[M.PED] dial	✓	
13	[IRIS] lever	✓	
14	[PREVIEW] button	✓	
15	Memory card access indicator	✓	
16	Memory card slot	✓	