

Software Version Update Procedures

Driver Software Installation Procedures with SD Memory Card

Please refer to the most recent execution outline, as the contents of this item "Driver Software Installation Procedures with SD Memory Card" may change.

Contents

1. General
2. Confirmation of Driver Software Version
3. Preparation
4. Driver Software Installation Procedures
5. In case of Software Installation for two or more P2 Deck consecutively

CAUTION: Before Updating Software

- Do not power down or pull card while updating. If the program quits during loading, the data will be erased or written partly and the restart is not made. If driver software can not be updated, please contact to Panasonic Sales Company.
- Disconnect RS-232 cable from AJ-SPD850 before updating.

1. General

1. Driver software can be installed by using SD Memory Card.
2. Driver software installation using SD Memory Card can be made with just file copy to SD Memory Card.

2. Confirmation of Driver Software Version

1. Open the Hour Meter display keep pushing “STOP”, “SHIFT” and “DIAG” buttons at the same time.
2. Push the “SEARCH” button 2 times and then the software version is displayed.

<Software Version Table (Sample)>

DIAG-MENU	SOFT VERSION
* P2CS OS	n1.02
P2CS AP	n1.02
SYSAV	1.02
I/F	n1.02
D-I/F	n1.02
MSC	B005
FLT	B003

(“D-I/F” is not displayed if IEE1394 board is not installed.)

Confirm Version

3. Preparation

3-1. Preparation for SD Memory Card

1. SD Memory Cards (more than 64MB memory card) are required.
2. Format the SD Memory Card by P2 equipments.

NOTE: SD Memory Card needs to be formatted by P2 equipments. SD Memory Card formatted by PC standard formatter will not work.

3-2. Copy of Image data for update

1. Download the file "**VSI*****.zip**" from Download Site.
2. Copy the file "**VSI*****.zip**" to hard disk of your PC and extract the file.
3. Insert a formatted SD Memory Card into the card slot of PC.
4. Copy the folder "**PRIVATE**" to SD Memory Card. The downloaded image data (update file: **spd*.img**) is included in folder "**PRIVATE**".

NOTE 1: Do not change the construction of folder and file name. The folder construction shown in the following and top of directory should be "**PRIVATE**".


NOTE 2: SD Memory Card needs to be unlocked write-protect switch.

4. Driver Software Installation Procedures

1. Turn ON the power this unit.
2. Press the **THUMBNAIL button** to display the thumbnail screen.
3. Insert a formatted SD Memory Card into the SD Memory Card insertion slot of this unit.



4. Press the **MENU BAR button**, then the menu at the bottom of Thumbnail Screen changes to yellow.
5. Use the **SEARCH Dial** to move the selected menu to "**OPERATION**" and press **SET button** to open the OPERATION menu.

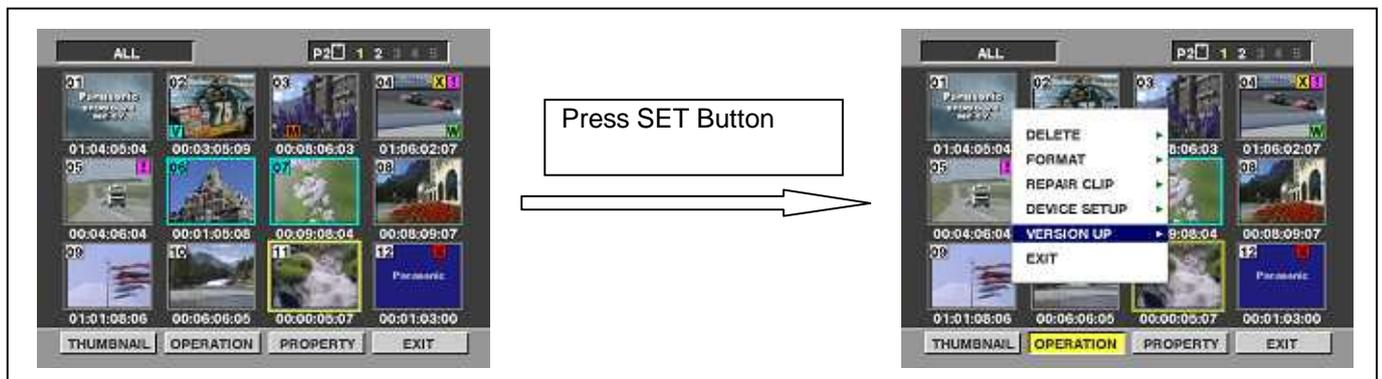


6.Start of Driver Software Installation

a).Select the item”**VERSION UP**” on the menu and press the **SET Button**.(If the version up SD Memory Card for install is not inserted into the unit, item "VERSION UP" does not appear.)

b).The confirmation menu of the execution is displayed.Select the item “**YES**” and press **SET Button**.

- ◆ Driver software installation takes approx.10-25min.please do not shut the power off during installing.
- ◆ Although E-37 or Warning may be displayed during installing,there is no problem.
- ◆ LCD Monitor display and Video output stop for a few minuets temporarily and then it returns.

7.Driver Software Installation starts and the message ”**PREPARING FOR VERSION UP**” appears on screen. In this timing, it is doing preparation such as the confirmation of the data of the updating.

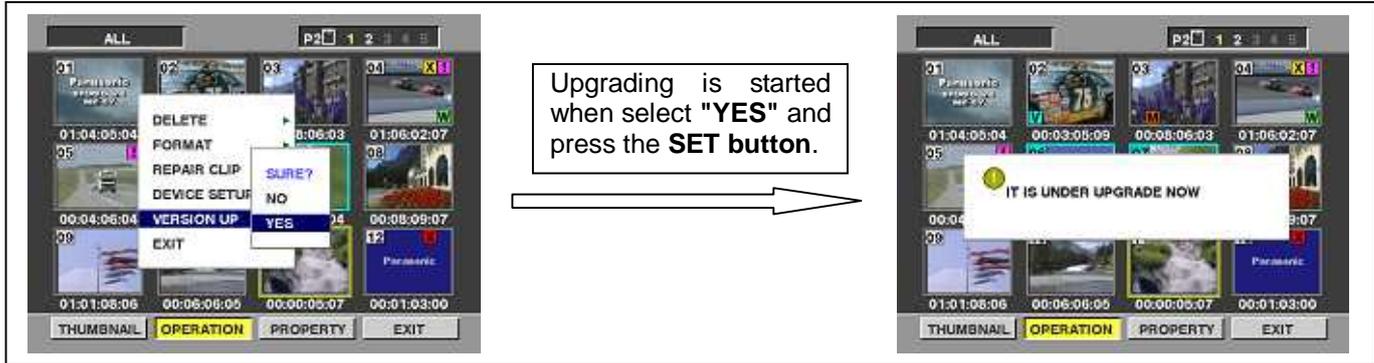


8.Following screen is displayed as screen "A" while updating.

- ◆ When starting the updating, the LED of SD Memory Card slot is flashed. (Green LED)

9.In updating succeeds, following screen is displayed as screen"B".

NOTE:

- ◆ If the update is not successful, an error message will appear on Display "C".
- ◆ Although the screen is displayed as screen "A" and the LED of SD Memory Card slot stays ON or OFF for more than 1min, this status is NG.

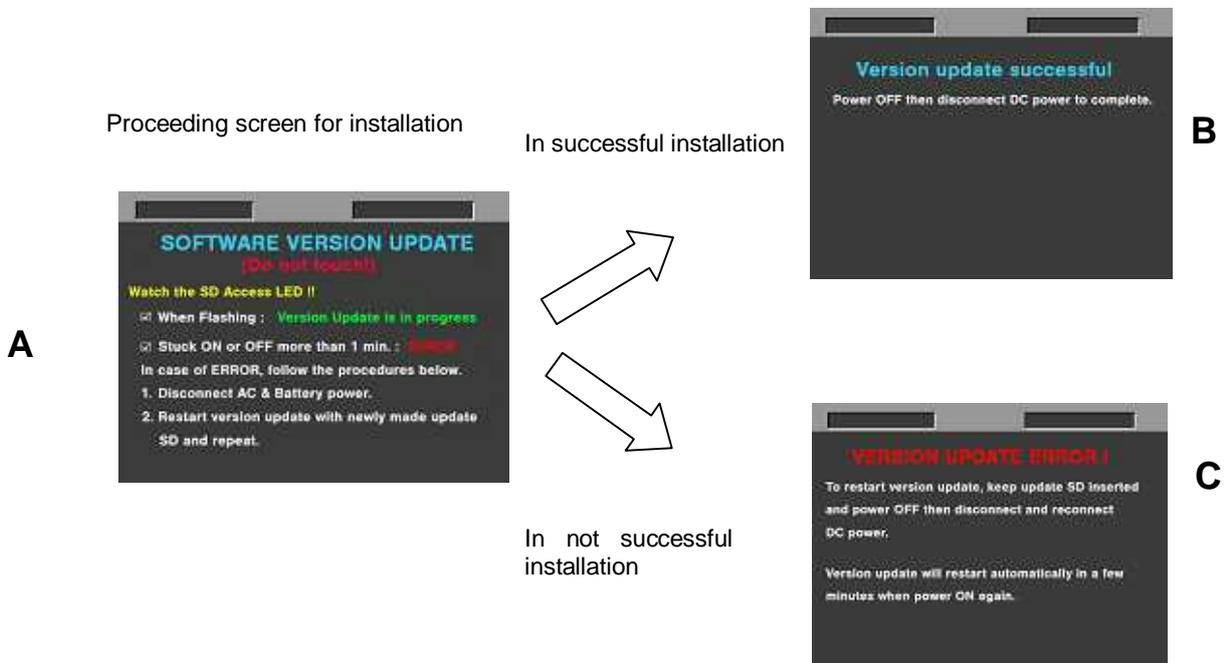

- ◆ If the power supply is shut down on the way to install or above error operation is performed, turn the power ON then restart the write function again. If the write function is not restarted, please contact Panasonic Sales Company.

10.Remove the SD Memory Card and turn the power OFF and ON.

11.Confirm that the software version is updated (refer to 2).

5. In case of Software Installation for two or more P2 Deck consecutively


Once the SD Memory Card is used for installing the driver software, the format of SD Memory Card inside has been changed. The “VERSION UP” menu does not appear on next installation.

[Installation Procedures]


1. Press the **MENU BAR** button, then the menu at the bottom of Thumbnail Screen changes to yellow.
2. Use the **SEARCH Dial** to move the selected menu to “**OPERATION**”.
3. Push “**STOP+RESET**” and and “**MENU BAR**” button at the same time.
4. The menu jumps to “**VERSION UP**” “**YES**” status.
5. Select “**YES**” and push SET button.

5-B

”STOP + RESET” + MENU BAR

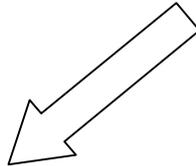

 Installation is started when select “YES” and press the SET button.



Preparing screen for installation

6. Driver software Installation starts and the message “PREPARING FOR VERSION UP” appears on screen. In this timing, it is doing preparation such as the confirmation of the data of the updating. At this time, the LED of SD Memory Card slot is lightened. (not flashing)

7. Repeat step from 8-11 in “4. Driver Software Installation Procedures”.