

## Be Sure to Read This First

# Web screen functions that are disabled when the PRE-REC function is set to [ON]

When the PRE-REC function\*<sup>1</sup> is set to [ON], the web screen operates in the manner described below, but this is not a malfunction.

Even when recording is not in progress, the web screen lamp (B) will remain lit in red.\*<sup>2</sup>

On the PC, the [Setup] button and the items under [OSD Menu Operation] on the left side of the web screen will be disabled and cannot be used. (A)

- Since the web screen lamp remains lit in red, you will not be able to confirm that recording has actually started/stopped. Look at the tally lamp of the unit (C) instead to confirm that recording has started/stopped.


### Web screen (PC)



### Web screen (mobile terminal)



### Recorder

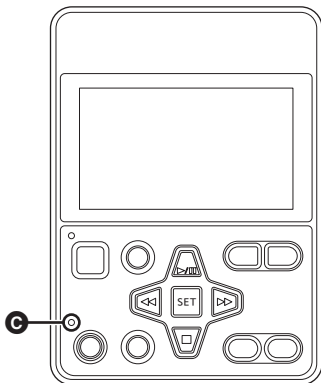

Operate the unit to set the PRE-REC function to [OFF]. Follow the menu path:

MENU : [RECORD SETUP] → [PRE-REC] → [OFF]

- When the PRE-REC function is set to [OFF], you can look at the web screen lamp to confirm that recording has started/stopped. The [Setup] button and the items under [OSD Menu Operation] can also be operated on the PC.

\*1 The PRE-REC function is a function that starts recording video and audio before the REC/PAUSE button is pressed. It prevents missed shooting opportunities.

\*2 The web screen lamp lights red when the SD card is being accessed (except during Playback Mode), PRE-REC is enabled, or recording is in progress.