

Editing Controller Setting

Model: AJ-HPM100 AJ-HPM110 AJ-HPS1500

When using the AJ-HPM100, AJ-HPM110 or AJ-HPS1500 as the PLAYER in the editing system, perform settings of P2 products and the controller as shown on the follows.

Panasonic AG-A850 Setting

1. Set the SETUP MENU of AG-A850 as follows.
SETUP-12(VTR CONSTANT) 01: DEVICE TYPE = FF FF (Default)
2. Set the SETUP MENU of AJ-HPM100/ AJ-HPM110/AJ-HPS1500as follows.
No.202: ID SEL = DVCPRO (Default)

Sony BVE-700 Setting

1. Set the SETUP MENU of AJ-HPM100/ AJ-HPM110/AJ-HPS1500 as follows.
No.202: ID SEL = DVCPRO (Default)
2. Set the VTR PORT SETUP of BVE-700 as follows.

	BLOCK-1								BLOCK-2							
	BYTE								BYTE							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
AJ-HPM100/110/HPS1500 (59.94Hz)	F0	33	00	96	06	06	02	8A	0A	0C	00	00	00	00	FF	00
AJ-HPM100/110/HPS1500 (50Hz)	F1	33	00	7D	06	06	02	8A	0A	0B	00	00	00	00	FF	00

Sony BVE-2000 Setting

1. Set the SETUP MENU of AJ-HPM100/ AJ-HPM110/AJ-HPS1500 as follows.
No.202: ID SEL = DVCPRO (Default)
2. Set the VTR CONSTANT of BVE-2000 as follows.

	DATA														
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
AJ-HPM100/110/HPS1500 (59.94Hz)	F0	33	00	96	06	06	02	8A	0A	0C	00	00	00	3C	FF
AJ-HPM100/110/HPS1500 (50Hz)	F1	33	00	7D	06	06	02	8A	0A	0B	00	00	00	3A	FF