Camera settings for P2 cast (AJ-PX5000)



How to confirm firmware version: MENU> SYSTEM>VERSION

VERSION	: 35.8	30-00-0.00			
MODEL NA	ME : AJ-I	PX5000G			
SERIAL NO	. : ???4	(AAUU24			
NETWORK	ID : 80	2424 <i>24247-</i> Dex			
UID	: 626	04E82068B0/	883 (S		
	OK				
*				10	
U SEL					
	VERSION MODEL NA SERIAL NO NETWORK UID	VERSION : 35.6 MODEL NAME : AJ-I SERIAL NO. : N-4 NETWORK ID : 80 UID : 626 OK	VERSION : 35.80-00-0.00 MODEL NAME : AJ-PX5000G SERIAL NO. : %477445624 NETWORK ID : 8092424727-024 UID : 82684552355833 OK	VERSION : 35.80-00-0.00 MODEL NAME : AJ-PX5000G SERIAL NO. : %47746024 NETWORK ID : 802424797024 UID : 6268455235883866 OK	VERSION : 35.80-00-0.00 MODEL NAME : AJ-PX5000G SERIAL NO. : %47AA802Q NETWORK ID : & @2604242Q7+004 UID : & @2604252058B0A88 OK

this NETWORK ID is necessary.

How to confirm "DATE" setting: DISPLAY> UB>PUSH "HOLD" several times.



Step2. Set "Dual Codec Setup"

How to set Dual Codec Setting: MENU > REC/PB> DUAL CODEC SETUP> CODEC USAGE> PROXY REC (P2) > PROXY REC MODE



STD 2 CH MP4 is not compatible with P2 Cast. So please use other Proxy Rec

Mode.

Choose one of the followings

- LOW 2CH MOV
- HQ 2CH MOV
- HQ 4ch MOV
- SHQ 2CH MOV
- AVC G6 2CH MOV

Step3. Set "Rec Meta Data"

How to set Dual Codec Setting: MENU > REC/PB > DUAL CODEC SETUP > REC META DATA > RECORD ON > CARD SERIAL ON



Step4. Set "NETWORK SEL"

How to set Network setting: MENU > I/F SETUP> USB/LAN> NETWORK SEL >WLAN or 4G LTE.

PAINT	E E Y I Y
and the second se	
CAMERA	SDI OUT1 MARKER
CLIP	MONI OUT MARKER +
REC/PB	DOWNCON SETTING >
I/F SETUP	GENLOCK >
FILE	MIC/AUDIO +
MAINTENANCE	USB/LAN +
SYSTEM	LCD MONITOR
USER MENU SE	L BATTERY/P2CARD
	× I
VE	OUTPUT SEL
PAINT	► FXIT
VF	> OUTPUT SEL >
CAMERA	► SDI OUT1 MARKER ►
CLIP	MONI OUT MARKER >
REC/PB	DOWNCON SETTING >
I/F SETUP	GENLOCK >
FILE	MIC/AUDIO
MAINTENANCE	USB/LAN
STSTEM	
USER MENU SEL	L BATTERY/P2CARD

WIRELESS PROPERTY

4G/LTE PROPERTY

SYST

USER

LCD

BATT

Select "WLAN" or "LAN" in NETWORK SEL item.

Step5. Set "Wireless Property"

How to set Wireless property setting: MENU > I/F SETUP> USB/LAN> WIRELESS PROPERTY > TYPE> INFRA >SSID INPUT MODE > SELECT SSID >INPUT ENCRYPT KEY



I/F SETUP > USB/LAN > WIRELESS PROPERTY > TYPE

Enter the "ENCRYPT KEY" of the access point.

How to set Wireless property setting:

MENU > I/F SETUP> USB/LAN> FTP CLIENT SERVICE > SETTING DATA > SD CARD >REC DURING UPLOAD> ENABLE >AUTO UPLOAD> REC CLIP(PROCY)



Select "REC CLIP (PROXY" in AUTO UPLOAD item.

Step7. Confirm the wireless and the ftp setting"

Please confirm the thumbnail screen so that the wireless and the ftp setting has been done.

