

Controlling Focus of AW-HE40 Camera Manually

(Setting Procedure via AW-RP50)

<How to manually adjust the focus of AW-HE40 connected to CAM1>

- ① Press the button 1 at <CAMERA STATUS/SELECTION>. - (Fig. 1-A)
- ② Press "FOCUS AUTO" button (*1) on the front panel to switch between Auto and Manual. - (Fig. 1-B)
- (*1) When this button's light is ON, it indicates Auto Focus. When it is OFF, it indicates Manual Focus and the focus can be adjusted using FOCUS dial. - (Fig. 1-C)

Also, changing the following camera menu setting enables you to manually adjust the focus.

- ③ Hold down CAMERA OSD button at the upper right of the panel so that the on-screen menu is displayed. - (Fig. 1-D)

* If CAMERA OSD button is held down again, the on-screen menu will disappear and the button's light will go off.


- ④ Use F1 dial to change the following camera menu setting. - (Fig. 1-E)

【Location】

- System > Others > Other1/4 > Focus Mode ⇒ Put the setting to [Manual] (*2).

(*2) This setting is linked with the setting for the above "FOCUS AUTO" button (Step ②).


(Figure 1)

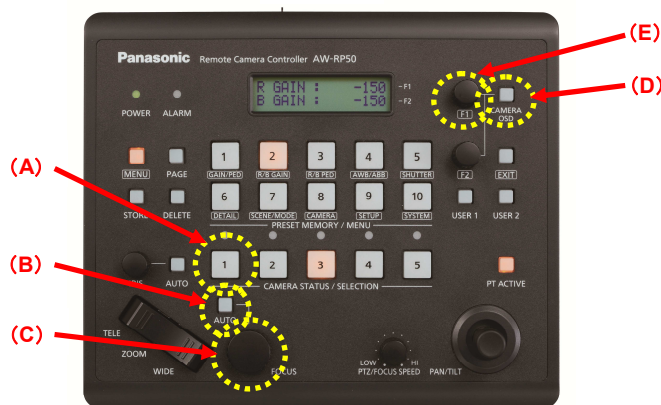


(Displayed On-Screen Menu)



Turn F1 → Select "System" → Press F1

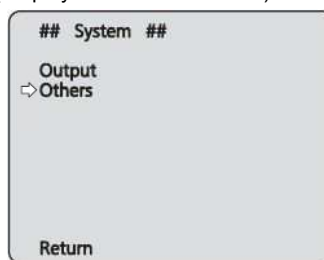

Turn F1 → Select "Others" → Press F1

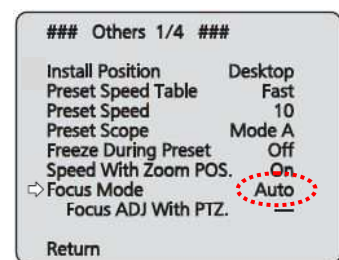

Turn F1 → Select "Focus Mode"

Press F1 → [Auto] Blinks

Turn F1 → Select [Manual]

Press F1 → Setting Determined

(Setting Procedure via Web Screen on PC)

- Start up the Web screen to change the following setting.

【Location】

- ① Press [Auto] button (*3) at "Focus" to switch between Auto Focus and Manual Focus. - (Fig. 2-A)


(*3) When this button's light is ON in green, it indicates Auto Focus. When it is OFF, it indicates Manual Focus.

- ② Adjust the focus using [Near] and [Far] buttons at "Focus". - (Fig.2-A)

* If [O. T. AF] button is pressed while the setting is at Manual Focus, focus adjustment is temporarily performed by Auto Focus.

* For the connection between PC and AW-HE40, please refer to the Manual [【Controlling AW-HE40 Camera via PC】](#).

(Figure 2: Web Screen)

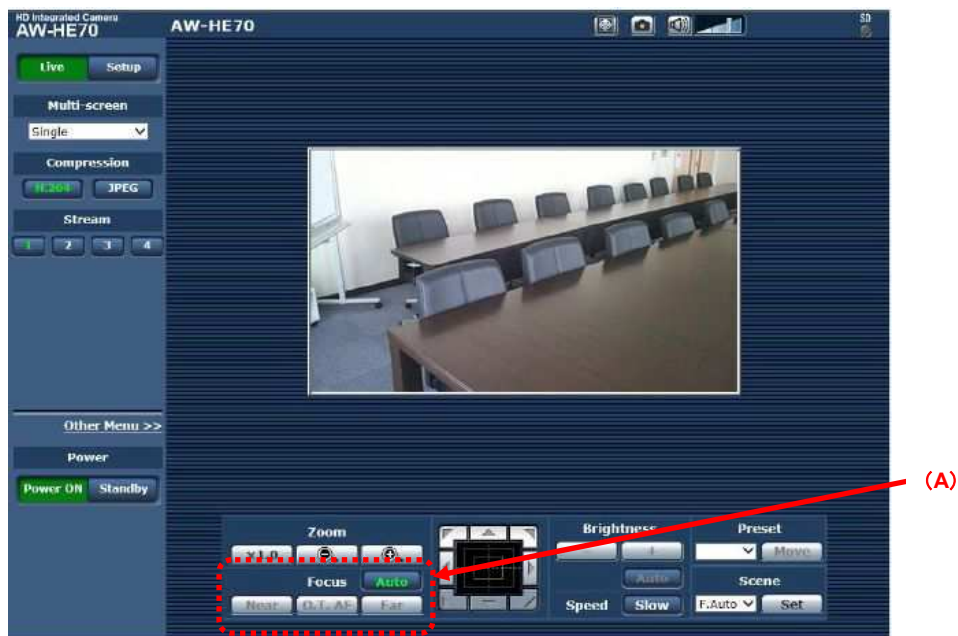

★ When Focus Mode is [Manual], the setting for "Focus ADJ With PTZ" (*4) can be changed.

(*4) What is "Focus ADJ With PTZ"?

It is a function to automatically readjust the focus while panning, tilting or zooming.

If you need full manual control of focus, please have this setting at [Off]. * Default: [Off]

【Location】

(Camera Menu)

- System > Others > Other1/4 > Focus ADJ With PTZ ⇒ [Off]

(Web Screen)

- Setup > Image/Audio > Image/Position > Preset position > Focus ADJ With PTZ ⇒ [Off]