

## Combining PinP (Picture in Picture)


★ This is to explain the procedure for combining a sub screen image with the background image.



### (Procedure for selecting the PinP signal)

- ① Press PinP button – (Fig.1-A) to set the crosspoint buttons to PinP material selection mode (PinP button blinks).
- ② Using the B bus buttons, select the PinP signal. – (Fig.1-B)
- ③ Press PinP button to release the PinP material selection mode (PinP button goes off).
- ④ Press PinP ON button – (Fig.1-E) to combine the PinP image.

(Figure 1: AW-HS50 Control Panel)

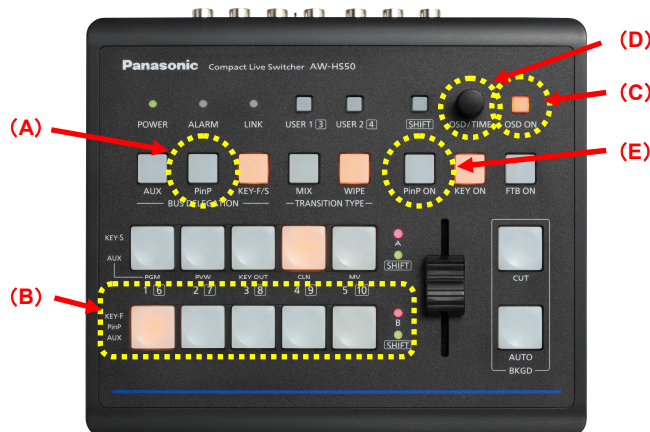


### (PinP settings)

Changing the shape, position and size of the PinP image to be combined is enabled as well as adding the border effect to it.

- ⑤ Hold down the OSD ON button – (Fig.1-C) for 2 seconds to open the menu. (To close it, hold down the button again for 2 seconds.)
- ⑥ Use the OSD/TIME dial – (Fig.1-D) to set or adjust the settings for the menu items in [3] PinP Menu. – (Fig.2 & Fig.3)

(Figure 2: AW-HS50 Menu Display Screen)

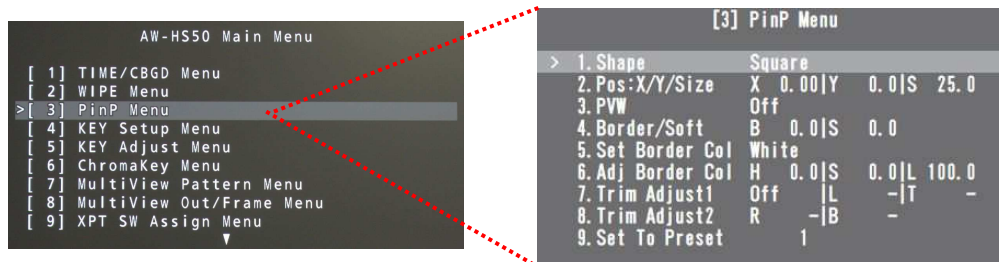

(Figure 3: AW-HS50 Menu Display Screen)

[3] PinP Menu					
> 1. Shape	Square				
2. Pos:X/Y/Size	X	0.00	Y	0.0	S 25.0
3. PVW	Off				
4. Border/Soft	B	0.0	S	0.0	
5. Set Border Col	White				
6. Adj Border Col	H	0.0	S	0.0	L 100.0
7. Trim Adjust1	Off		L	-	T -
8. Trim Adjust2	R	-	B	-	
9. Set To Preset	1				

1. Setting for shape of PinP image to be combined

2. Adjustment of center position and size of PinP image  
X coordinate (X), Y coordinate (Y), size (S)

4. Setting for the width of PinP image border (B)  
\* Set "0.0" when the border effect is not to be added  
Setting for the amount of soft effect on PinP image (S)

5. Setting for the color of PinP image border

6. Adjustment of hue (H), saturation (S) and luminance (L) of color that has been set for border

\* For the details, please see pp. 18 – 19 of Operating Instructions <Operations and Settings>.