


# AW-RP50 – Switching Registered Camera Numbers (via IP Connection)

★ The remote cameras registered with camera selection buttons can be switched with simple operations.

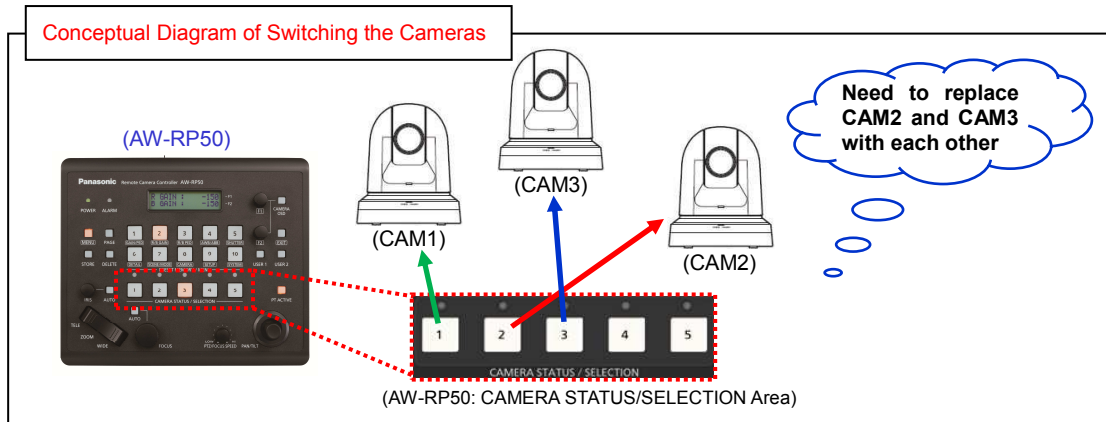

## ■ Setting Procedure

\* Switching the camera numbers of CAM2 (192. 168. 0. 11) and CAM3 (192. 168. 0. 12)

- ① Press MENU button. – (Fig.1-A)
- ② Press [10] SYSTEM button. – (Fig.1-B)
- ③ Turn F1 dial – (Fig.1-C) to make [2] CAM ASSIGN – (Fig.2) appear on the LCD Panel. Then press F1 dial.
- ④ Turn F1 dial to display [2. CAM2] on the upper half, and the IP address of [CAM2] on the lower half of the LCD.

\* Tally lamp of the relevant camera (CAM2) will light up so that you can distinguish it from others.




- ⑤ Turn F2 dial – (Fig.1-D) to change IP address to the other camera's address to be replaced (192. 168. 0. 12). Then press F2 dial.

(Figure 1: AW-RP50 Control Panel)



(Figure 2: LCD Panel)

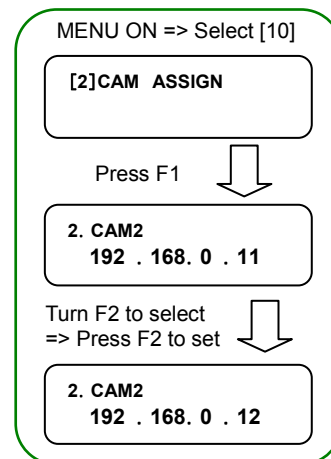

<Note>

- This is a change to AW-RP50's camera setting table only. No change will be made to the cameras' own IP addresses.
- Only the cameras connected via IP connection can be switched by this procedure.  
It cannot change the camera numbers via the serial connection.