

Controlling AW-HE40 Camera via AW-RM50 Wireless Remote

- ★ To control AW-HE40 via AW-RM50, the camera needs to be selected according to the IR ID setting (*1) set for it, using the buttons [CAM1] – [CAM4] on the remote controller.

(*1) IR ID Setting: Enables controlling up to 4 cameras via AW-RM50.



This is a setting to prevent the interference while controlling multiple cameras.

【Location of AW-HE40 IR ID Setting】

- Camera Menu: Systems > Others > Others2/4 > IR ID ⇒ [CAM1] – [CAM4] * Default Setting: [CAM1]

- ★ Please confirm the following point before using the wireless remote control.

- Aim the wireless remote control at a wireless remote control signal light-sensing area (front panel or side panel) on AW-HE40, and operate it within a range of 10 meters from these areas.

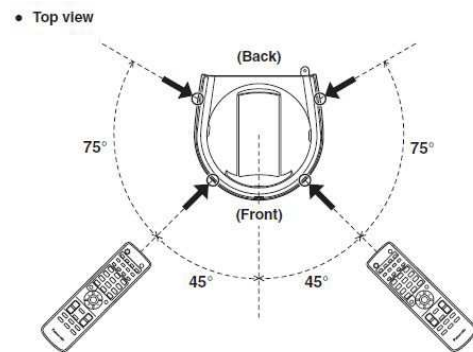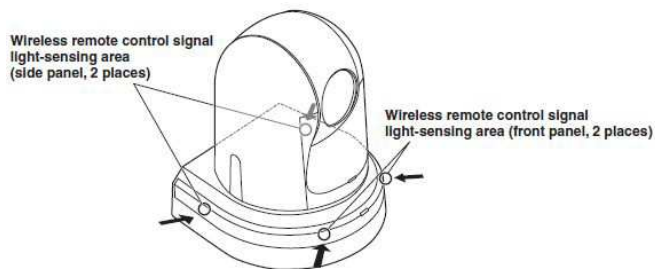

【Procedures for Major Operations】

● Controlling the power of AW-HE40 assigned to IR ID [CAM1]

- ① Press AW-RM50 [CAM1] button. – (Fig. 1-A)
- ② Hold down AW-RM50 [ON/STANDBY] button (for 2 sec). – (Fig. 1-B)

● Displaying the camera menu of AW-HE40 assigned to IR ID [CAM2]

- ① Press AW-RM50 [CAM2] button. – (Fig. 1-A)
- ② Hold down AW-RM50 [MENU] button (for 2 sec). – (Fig. 1-C)

● Registering the pan-tilt position of AW-HE40 assigned to IR ID [CAM3] in the preset memory


- ① Press AW-RM50 [CAM3] button. – (Fig. 1-A)
- ② Use the pan-tilt or zoom buttons to determine the camera angle.
- ③ While holding down AW-RM50 [PRESET] button, press the button corresponding to the preset memory number you want to register in. – (Fig. 1-D)

* Using AW-RM50, up to 12 positions can be registered in the preset memories.

* If an already registered number is selected again, that preset memory position is overwritten.

* To recall a preset memory position, press the button in which the preset memory position is registered.

((Figure 1: AW-RM50))

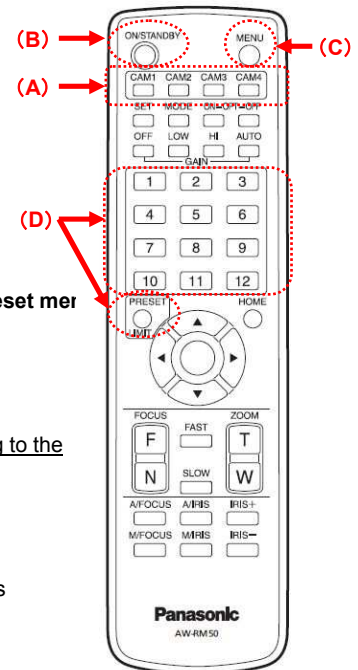

- * For the parts and their functions, please see page 43 and after of AW-HE40 Operating Instructions <Basics>.
- * For the detailed operations, please see “When performing the operations using the wireless remote control” under each setting/adjustment item in AW-HE40 Operating Instructions <Operations and Settings>.