


# AW-HE40 – Turning Image Upside Down

- \* If AW-HE40 camera is installed in a hanging position, the setting for image outputting needs to be changed via the camera menu so that the top and bottom of output images are reversed.

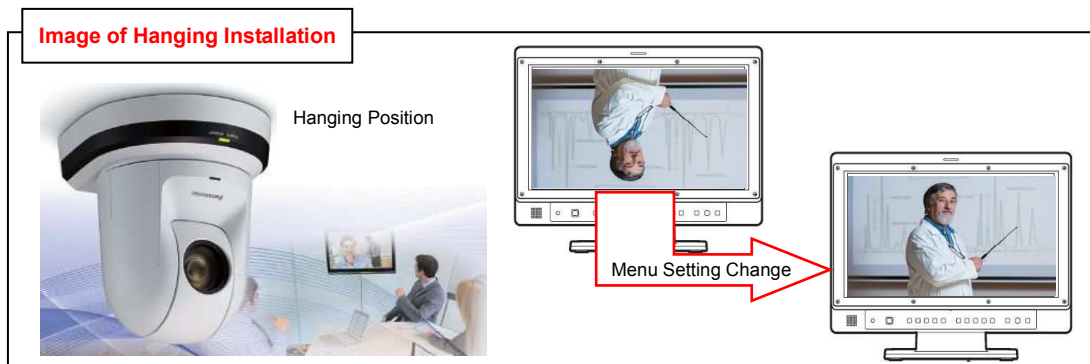


## 【Procedure for Setting via AW-RP50】


- \* Setting Change for Upside-Down Output Image from AW-HE40 Camera Assigned to [CAM1]
- ① Press the Button 1 at <CAMERA STATUS/SELECTION>. – (Fig.1-A)
  - ② Hold down CAMERA OSD button – (Fig.1-B) for 2 seconds. The button will light up. (To put it out, hold it down again for 2 seconds.) And the on-screen menu will be opened on the SDI (or HDMI) output image.
  - ③ Use F1 dial – (Fig.1-C) to change the camera menu setting below.

Procedure: System > Others > Others 1/4 > Install Position ⇒ Select [Hanging].


(Figure 1: AW-RP50 Control Panel)

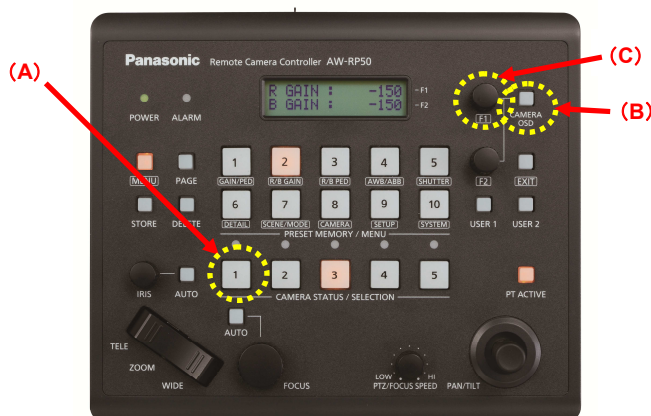


(Figure 2: AW-HE40 On-Screen Menu)

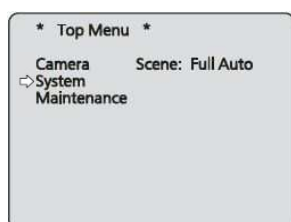

Turn F1 → Select "System" → Press F1

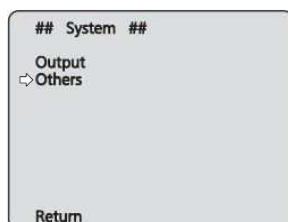

Turn F1 → Select "Others" → Press F1

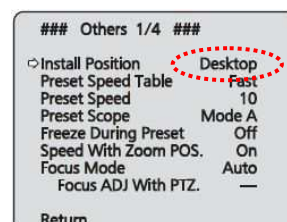

- Press F1 → [Desktop] Blinks
- Turn F1 → Select [Hanging]
- Press F1 → Setting Determined

## 【Procedure for Setting via AW-RM50 Infrared Remote Control】

- \* Setting Change for Upside-Down Output Image from AW-HE40 Camera Assigned to [CAM1] (= IR ID (\*1))

- ① Press [CAM1] button. – (Fig.3-A)
- ② Hold down [MENU] button (for 2 seconds). – (Fig.3-B)

\* On-screen menu (Fig.2 above) will be opened on the SDI (or HDMI) output image.

- ③ Use Pan-Tilt/Menu Operation buttons – (Fig.3-C) to change the [Install Position] setting to [Hanging]. (As in the camera menu procedure of the previous page)

### < Pan-Tilt/Menu Operation buttons >


These buttons are used for menu operations while the camera menu is being displayed.

Use [▲], [▼], [◀] and [▶] buttons to select menu items.

Press [O] button when determining a setting, change of setting or submenu.

(\*1) For IR ID setting, please refer to the manual 【Controlling AW-HE40 Camera via AW-RM50 Wireless Remote】.

[https://eww.pass.panasonic.co.jp/pro-av/support/content/faq/EN/remcam/3\\_.pdf](https://eww.pass.panasonic.co.jp/pro-av/support/content/faq/EN/remcam/3_.pdf)

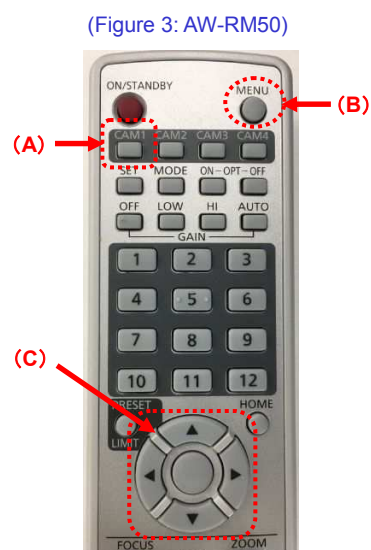

## 【Procedure for Setting via Web Screen】


- Start up the Web Screen and change the setting for [Install Position] according to the procedure below.

Procedure: [Setup] > [Image/Audio] > [System] > [Others/Install Position]

⇒ Check the [Hanging] option > Press [Set] button at the bottom of “Others” column

- \* Please enter your user name and password if the login screen is displayed.

(Web Screen for AW-HE40)

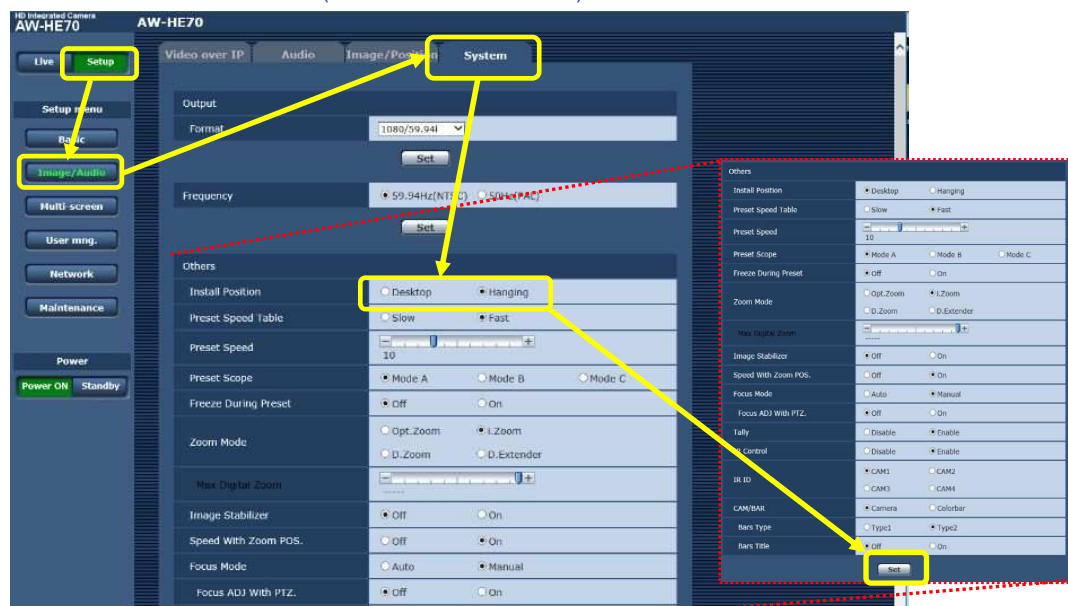

- \* For the connection between PC and AW-HE40 camera, please refer to the manual 【Controlling AW-HE40 Camera via PC】.

[https://eww.pass.panasonic.co.jp/pro-av/support/content/faq/EN/remcam/4\\_.pdf](https://eww.pass.panasonic.co.jp/pro-av/support/content/faq/EN/remcam/4_.pdf)