

# Projector Network Setup Software Operation Guide


Thank you for purchasing this Panasonic product.

This document explains how to operate the projector network configuration software.

## ■ Introduction

This software allows you to simultaneously configure administrator accounts, network information such as IP addresses, and projector names for multiple projectors that are connected to the same network.

Once configured, an administrator account cannot be changed using this software. Please change it on the projector itself or through the web control screen. Refer to your projector's user manual for instructions on how to change an administrator account.

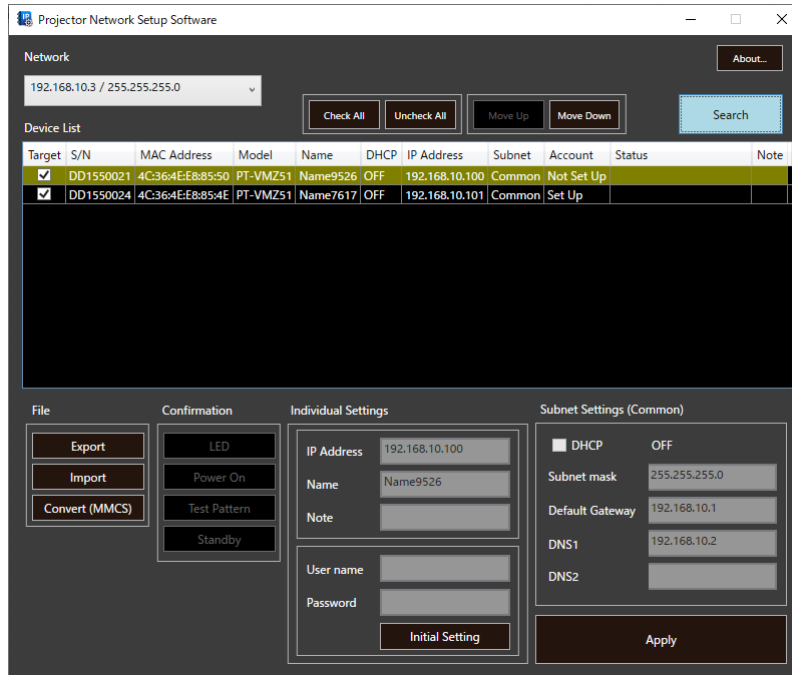

## ■ Things to Prepare

- A computer with a LAN port on which Windows 10, or Windows 11 is installed
- A LAN cable (straight or cross)  
Check with your network administrator regarding usability of straight or cross cables, or both, as this will differ according to your system configuration. For projectors, the cable type (straight or cross) is detected automatically.
- Projector network setup software (this software "ProjectorNetworkSetupSoftware.exe")

## ■ Preparation

1. **Place the ProjectorNetworkSetupSoftware.exe file in any convenient location on your computer.**
  - This software does not require installation. Directly launch and operate the executable file.
2. **Connect the computer to the network or projector using a LAN cable.**
3. **Put each projector to be configured into standby mode, or turn it on and put it into projection mode.**
  - For projectors for that have a [PROJECTOR SETUP] menu which includes the [STANDBY MODE] option, if the [STANDBY MODE] is set to [ECO], the administrator account, network information such as IP address, and the projector name cannot be set using this software while the projector is on standby. To set the administrator account, network information such as the IP address, and projector name in standby mode, first set the [STANDBY MODE] to [NORMAL] by using the menu.

## ■ Operating Procedure


This software sets the administrator account, network information, and projector name for one or more projectors that are connected via LAN and displayed in the [Device List]. The maximum number of projectors that can be simultaneously configured is 256. Settings can be made using either of two methods.

- A) Entering configuration information into this software → page 2
- B) Reading previously created configuration information and applying it to projector(s) → page 6


## A) Entering configuration information into this software

### 1. Launch this software (ProjectorNetworkSetupSoftware.exe).

- The following screen appears.

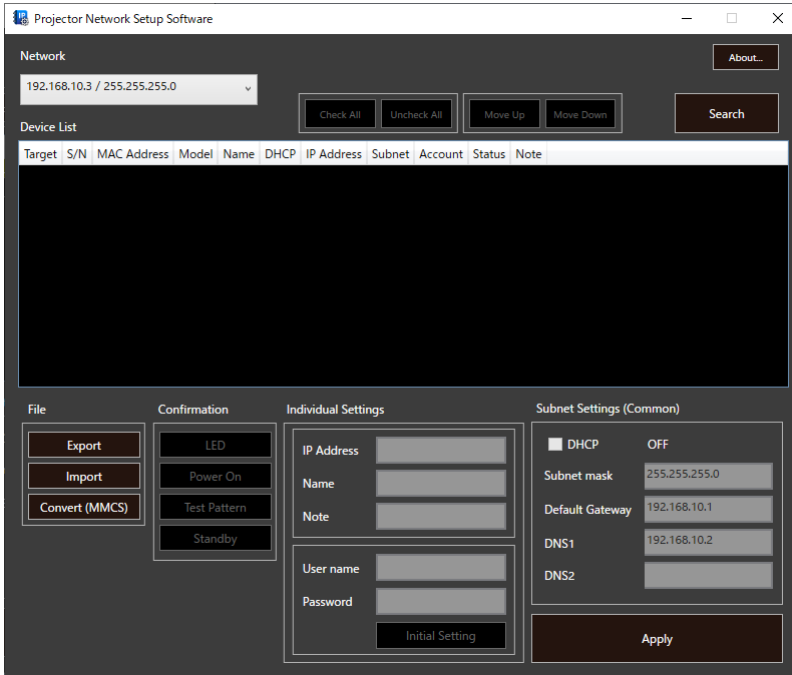


### 2. From the [Network] pull-down menu, select the network to which the computer is connected.

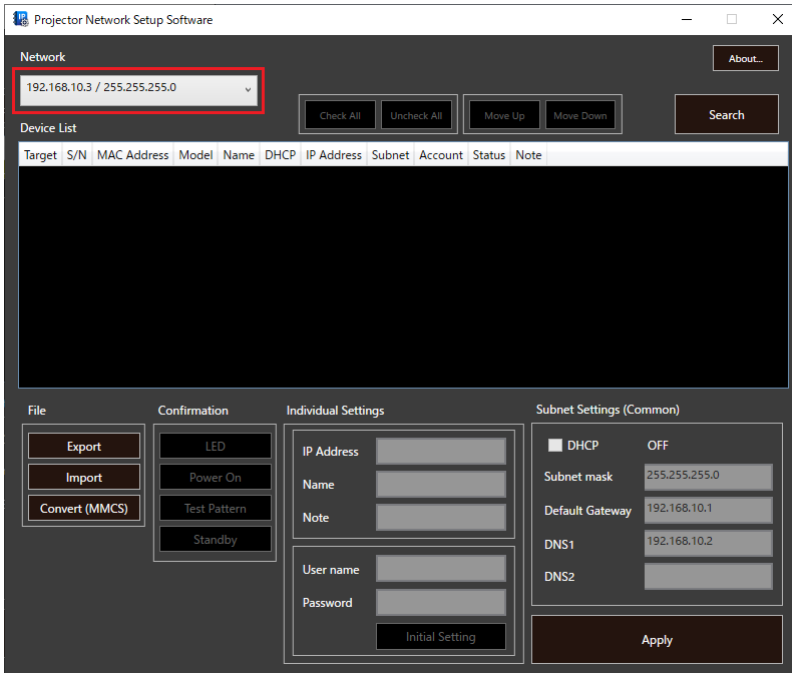


### 3. Click the [Search] button.

- Projectors on the network are located and detected projectors are displayed in the [Device List].
- The maximum number of projectors that can be displayed as search results is 2048.
- This search only finds projectors that use IPv4 addresses. Projectors that use only IPv6 addresses cannot be found or configured.

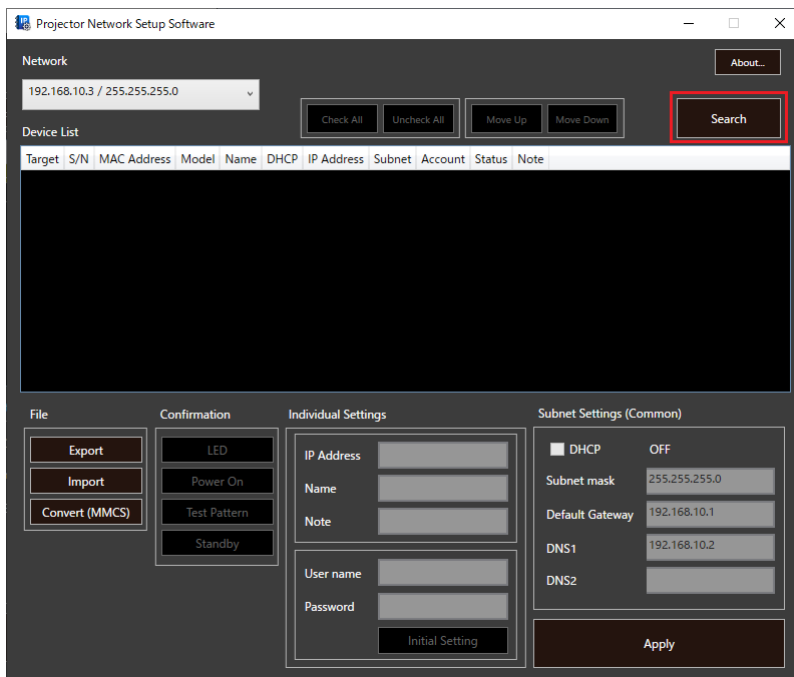

### 4. Select the projector to be configured.

- Place a check mark in the [Target] check box in the line containing the projector to which settings are to be applied from the search results displayed in the [Device List].
- Clicking the [Check All] button selects all rows, and clicking the [Uncheck All] button deselects all rows.

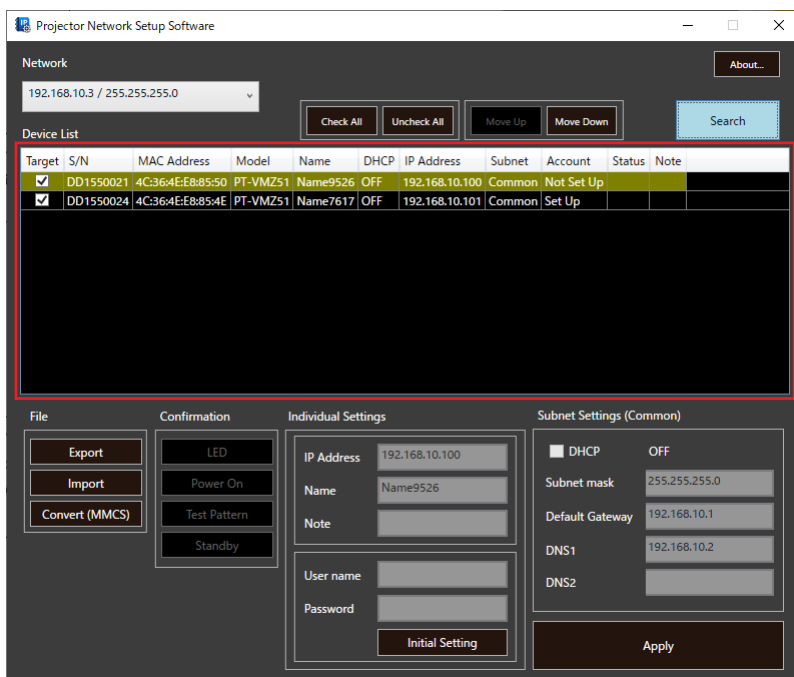


### 5. Select a projector in the [Device List] for which no administrator account has been set.

- To configure the network information and projector name, you first must set up an administrator account.
- [Not Set Up] is displayed under [Account] for projectors that do not have an administrator account.
- If you have already set up an administrator account, go to step 7.


**6. Click the [Initial Setting] button.**

- The [Initial Setting] screen appears.

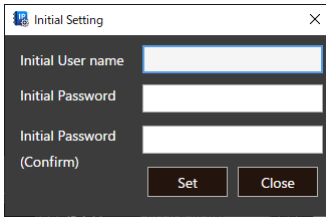

**7. Configure the administrator account.**

- Enter the user name and password to be used for the administrator account in the [Initial User name], [Initial Password], and [Initial Password (Confirm)] fields. When you click the [Set] button, the display under [Account] changes to [Entered].
- For information on the characters and maximum number of characters that can be used for administrator account settings, see “Characters and maximum number of characters allowed in administrator account settings” (➔ page 8).
- To prevent malicious third parties from modifying network information, please restrict access by user name and password.

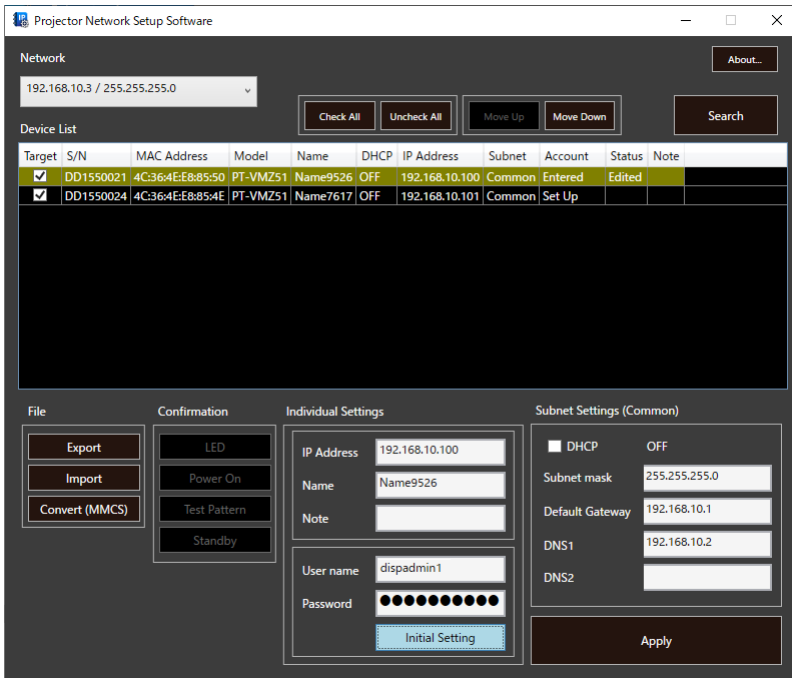

**8. Enter network information.**

- When [DHCP] is set to ON, the [IP Address], [Subnet mask], [Default Gateway], [DNS1], and [DNS2] settings cannot be specified. To specify an IP address, remove the check from the check box to set [DHCP] to OFF, and then enter the IP address.
- If you want to change the IP address setting, edit the [IP Address] field. After updating the [IP Address] contents, [Edited] appears in the [Status] field. Edit [Subnet mask], [Default Gateway], [DNS1], and [DNS2] as required.
- See “Parameters You Can Set” (➔ page 8) for details on settings that can be made using this software.
- IP addresses can also be assigned automatically. If the [IP Address] field is left blank or filled with “\*”, an available IP address is assigned automatically. For details, see “Automatic IP address assignment” (➔ page 8).

**9. Enter the user name and password of the administrator account assigned to the projector in the [User name] and [Password] fields.**


- For projectors whose administrator accounts have been configured in the [Initial Setting] screen, the user name and password of the administrator account are entered automatically.

**10. Click the [Apply] button.**

- The settings are reflected in the corresponding projectors. When you click the [Apply] button, [OK] appears in the [Status] and the display in [Account] changes to [Set Up].
- Clicking the [Apply] button overwrites the network configuration information for all selected projectors. For projectors that you do not want to overwrite, first make sure that [Target] is not checked.

## Notice


- To set up administrator accounts for additional projectors, repeat steps 4 through 6.
- To set the network information for additional projectors, repeat steps 7 and 8.
- The software does not have a redo function. If you accidentally overwrite the network settings, please set them again.
- If you need to verify the location of the currently selected projector, click the [LED] button. This causes the power indicator <ON(G)/STANDBY(R)> on the corresponding projector to flash for 5 seconds. If you cannot locate a projector by its flashing power indicator (such as when the projector is installed in a high location), operate the [Power On] button, [Test Pattern] button, and [Standby] button to check initiation of projection and test pattern display. Note that when you operate the [Confirmation] button, the user name and password of the administrator account set to the projector must be entered in the [User name] and [Password] fields.

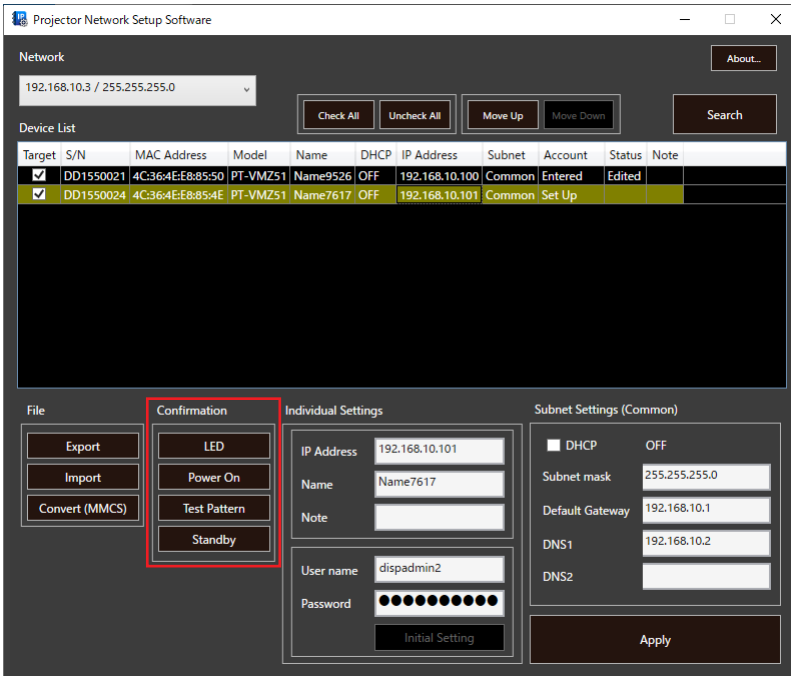


## B) Reading previously created configuration information and applying it to projector(s)

### 1. Launch this software (ProjectorNetworkSetupSoftware.exe).

- The following screen appears.

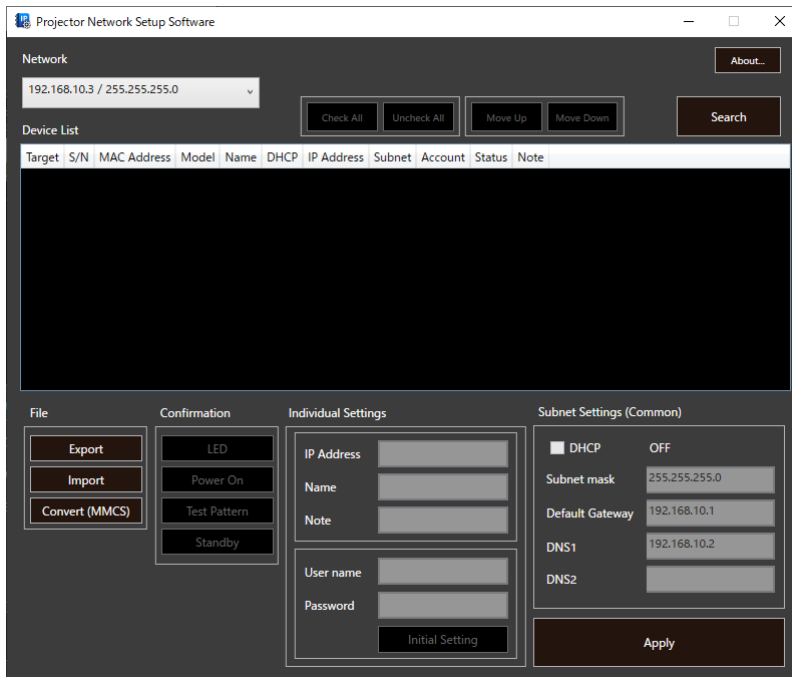

### 2. From the [Network] pull-down menu, select the network to which the computer is connected.

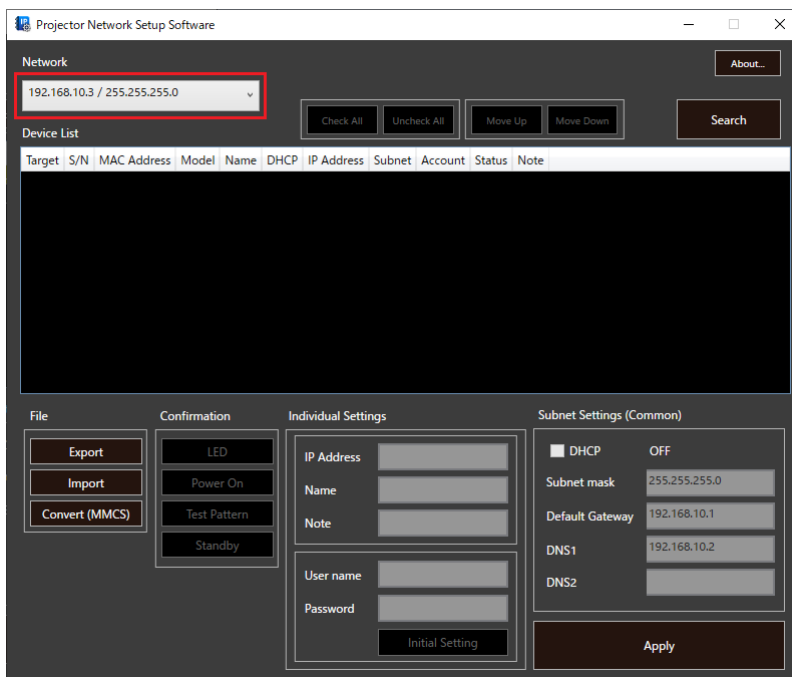

### 3. Click [Search].

- Projectors on the network are located and detected projectors are displayed in the [Device List].
- The maximum number of projectors that can be displayed as search results is 2048.
- This search only finds projectors that use IPv4 addresses. Projectors that use only IPv6 addresses cannot be found or configured.
- You can also export an editable CSV file containing only parameter names. In that case, do not perform the operation in step 3, but go to step 4.

### 4. Click [Export].

- A file in CSV format is generated on the computer desktop listing projectors that are included in the [Device List]. The file name consists of "PNSS" and the date and time the file was created. (Example: PNSS20180412170704.csv)
- If you click [Export] while no projector is displayed in the [Device List], an editable CSV file containing only the parameter names is exported for editing.


## 5. Edit the CSV file using Excel or a similar spreadsheet software or editor.

- Enter the network information (IP address, etc.) to be set for the projector, the user name and password set for the projector's administrator account, and other device information such as the serial number. For details on items that can be entered, see "About CSV Files" (➔ page 9).
- For projectors that have not been configured with an administrator account, also be sure to enter the user name and password for the administrator account. In the [Device List], [Not Set Up] is displayed under [Account] for projectors which an administrator account has not been set.
- If the user name specified for the administrator account contains characters that cannot be used or exceeds the maximum number of characters, it is regarded as a format error upon import into the projector and [Format error] is displayed under [Status]. For details on items that can be entered, see "About CSV Files" (➔ page 9).
- You can choose to leave the IP address blank. If no IP address is entered, a free IP address in the currently connected network is assigned automatically. For details, see "Automatic IP address assignment" (➔ page 8).

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
	S/N(M)	MAC Address(O)	Model(O)	Name(O)	DHCP(O)	IP Address(R)	Subnet(O)	Default Gateway(O)	DNS1(O)	DNS2(O)	AUTH User name(M)	AUTH Password(M)	INIT User name(M)	INIT Password(M)	Note(O)
1	DD1550021	4C:36:4E:E8:85:50	PT-VMZ51	Name9526	OFF	192.168.10.100	255.255.255.0	192.168.10.1	192.168.10.2		dispadmin1	Panasonic1	dispadmin1	Panasonic1	
2	DD1550024	4C:36:4E:E8:85:4E	PT-VMZ51	Name7617	OFF	192.168.10.101	255.255.255.0	192.168.10.1	192.168.10.2		dispadmin2	Panasonic2			

## 6. Click the [Import] button and select the edited CSV file.

- The CSV file can also be imported without clicking the [Import] button by dragging and dropping the file into the [Device List].
- If a projector listed in the CSV file is detected in the currently selected network, [Found] is displayed under [Status]. [Not Found] is displayed for any projectors that are not detected.
- If you set up a new administrator account by importing a CSV file, the contents are reflected in the [User name] and [Password] fields, and the display under [Account] changes to [Entered], enabling entry of information such as IP addresses.

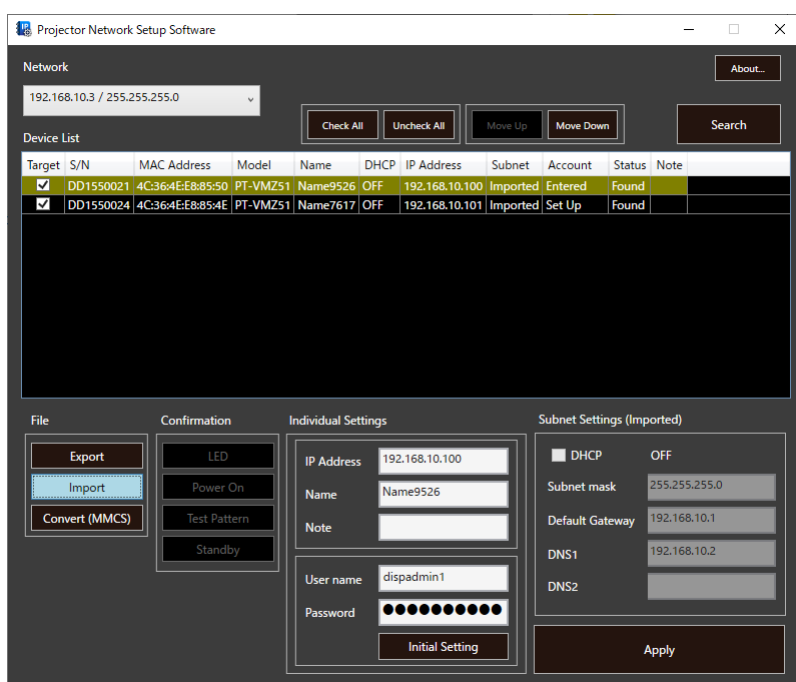

## 7. Select the projector to which settings are to be applied in the [Device List].

## 8. Click the [Apply] button.

- The contents of the CSV file are reflected in the selected projector, the [Status] display changes to [OK] and the [Account] display will change to [Set Up].

### Notice

- The software does not have a redo function. If you accidentally overwrite the network settings, please set them again.

## ■ Parameters You Can Set

Using this software, you can set the following parameters.

Parameter	Entry type	Contents
IP Address	Individual	Sets the IP address (IPv4).
Name	Individual	Sets the projector name.
DHCP	Common	Enables or disables DHCP. When set to ON, the IP address, subnet mask, default gateway, and DNS1/DNS2 addresses are obtained automatically.
Subnet mask	Common	Sets the subnet mask.
Default Gateway	Common	Sets the IP address of the default gateway. Network connection is possible even if this parameter is not set.
DNS1	Common	Sets the IP address of the primary DNS server. Network connection is possible even if this parameter is not set.
DNS2	Common	Sets the IP address of the alternate DNS server. Network connection is possible even if this parameter is not set.

Individual: Values entered into each row of the [Device List] are applied individually to each projector.

Common: The same common value is applied to all projectors appearing in the [Device List].

### Characters and maximum number of characters allowed in administrator account settings

The characters and maximum number of characters allowed in the user name and password for the administrator account are as follows.

**User name:** Up to 16 alphanumeric symbols excluding “.”.

**Password:** Up to 16 alphanumeric characters and symbols

### Characters and maximum number of characters allowed in the projector name

The characters that can be used are as follows.

**Alphabet:** A to Z, a to z (Lower-case letters can be used to set the projector name only if the projector name previously included lower-case letters.)

**Numerals:** 0 to 9

**Symbols:** “-”, “.”

The maximum number of characters is 8 single-byte characters. However, if the projector already had a name of 9 or more characters before setting, the maximum number of characters is the number of characters in the prior projector name.

### Automatic IP address assignment

When making or importing network settings, if an IP address field is left blank or contains an asterisk, an IP address is assigned automatically from available addresses within the subnet range excluding the specified default gateway and DNS addresses (DNS1 and DNS2).

The table below shows a typical network configuration for a computer on which this software is used.

IP address	192.168.10.20
Subnet mask	255.255.255.0
Default gateway	192.168.10.1
DNS1	192.168.10.2
DNS2	192.168.10.3

When you apply a value from the “IP address entry example” column of the following table from the computer on which this software is being used by entering it into the network settings or importing it from a CSV file, an address will be assigned automatically as indicated in the “Automatically assigned IP address” column. Note that the asterisk must always be the last character in the entered string. If it is included in the middle of a string, characters following the asterisk are ignored.

IP address input example	Automatically assigned IP address
Blank	Any available IP address from 192.168.10.4
*	Any available IP address from 192.168.10.4
192.*	Any available IP address from 192.168.10.4
192.168.10.1*	Any available IP address from 192.168.10.10
192.168.10.2*	Any available IP address from 192.168.10.21 (excluding the IP address “192.168.10.20” of the computer on which you are using the software)
192.168.10.10*	Any available IP address from 192.168.10.100

### Notice

- If there are no available IP addresses, a warning is displayed and automatic assignment is not performed.



## ■ About CSV Files

The exported CSV file contains information such as serial numbers and IP addresses that are required for network configuration.

Example of CSV file:

S/N(M),MAC Address(O),Model(O),Name(O),DHCP(O),IP Address(R),Subnet mask(O),Default Gateway(O),DNS1(O),DNS2(O), AUTH User name(M),AUTH Password(M),INIT User name(M),INIT Password(M),Note(O)
SD0000001,00:00:00:00:00:01,PT-VMZ51,Name0001,OFF,192.168.10.101,255.255.255.0,192.168.10.1,192.168.10.1,,admin1,panasonic,,
SD0000002,00:00:00:00:00:02,PT-VMZ51,Name0002,OFF,192.168.10.101,255.255.255.0,192.168.10.1,192.168.10.1,,admin1,panasonic,,
SD0000003,00:00:00:00:00:03,PT-VMZ51,Name0003,OFF,192.168.10.101,255.255.255.0,192.168.10.1,192.168.10.1,,admin1,panasonic,,
SD0000004,00:00:00:00:00:04,PT-VMZ51,Name0004,OFF,192.168.10.101,255.255.255.0,192.168.10.1,192.168.10.1,,admin1,panasonic,,

The first line indicates the name of each parameter. If no projectors appear in the [Device List], a CSV file containing only the parameter names will be output. Do not delete the parameter names.

The letters M, R, and O to the right of each item name indicate the necessity for entry of each item. The meanings of these letters are indicated in the table below.

Letter	Necessity
M (Mandatory)	Entry is required. (Use INIT User name and INIT Password only when setting up an administrator account.)
R (Recommended)	The password may be filled in automatically, but manual entry may be required.
O (Optional)	Enter as required. Network connection is possible even if this parameter is not entered.

The second and following lines are each composed of the following parameters.

Parameter	Letter	Contents
S/N	M	Serial number of the target projector.
MAC Address	O	MAC address of the target projector. Network configuration is possible even without entering a serial number when a MAC address is entered.
Model	O	Model name of the target projector. This item is not used for network configuration. If not entered, the model name of the projector that matches the serial number or MAC address on the selected LAN is assigned.
Name	O	Projector name to be set to the target projector. If not entered, the projector name of the projector whose serial number or MAC address matches the selected LAN is assigned.
DHCP	O	Specify whether DHCP for the target projector is to be set ON or OFF. If not entered, it is set to OFF. When set to ON, the IP address, subnet mask, default gateway, and DNS1/DNS2 addresses cannot be set.
IP Address	R	Enter the IP address (IPv4) to be set to the target projector. When DHCP is set OFF and no IP address is entered, or when an IP address is specified using an asterisk, a valid, unique IP address within the selected LAN is assigned automatically.
Subnet mask	O	Enter the subnet mask to be set to the target projector. If DHCP is OFF and the subnet mask is not entered, the [Subnet mask] value in [Subnet Settings (Common)] will be used for applying network settings.
Default Gateway	O	Enter the IP address of the default gateway to be set to the target projector. Network connection is possible even if this parameter is not set. If DHCP is set ON, entry is not required.
DNS1	O	Enter the IP address of the primary DNS server. Network connection is possible even if this parameter is not set. If DHCP is set ON, entry is not required.
DNS2	O	Enter the IP address of the alternate DNS server. Network connection is possible even if this parameter is not set. If DHCP is set ON, entry is not required.
AUTH User name	M	Enter the user name of the administrator account that was set to the target projector. If the administrator account has not yet been set up, enter the same user name as the INIT User name.
AUTH Password	M	Enter the password for the administrator account that was set to the target projector. If the administrator account has not yet been set up, enter the same password as the INIT Password.
INIT User name	M *	If the administrator account has not yet been set for the target projector, enter the user name to be assigned to the administrator account. You can use up to 16 alphanumeric characters and symbols.
INIT Password	M *	If the administrator account has not yet been set for the target projector, enter the password to be assigned to the administrator account. You can use up to 16 alphanumeric characters and symbols.
Note	O	You can enter supplemental information about the target projector or the like using single-byte alphanumeric characters and symbols. This information is not used for network configuration, but is displayed in the [Device List] of this software. While information exceeding 32 characters can be entered, the maximum number of characters displayed in the [Device List] is 32.

\* Enter when setting up an administrator account.

## Points to note about CSV files

- If the user name and password start with a symbol (e.g., @Panasonic), Excel may interpret the name as a function when you try to change the user name and password in Excel. In such case, edit the relevant cells using a text editor such as Notepad. All other cells of the CSV file can be changed using Excel.

## ■ Status


The following statuses are displayed under [Status] in the [Device List]. Projector statuses other than [OK], [Edited], and [Found] are displayed in red letters.

Status	Description
OK	The projector was located and its network settings have been successfully configured.
Edited	Editing of projector settings has been completed.
Found	The projector was found on the LAN.
Not found	The projector was not found on the LAN.
Format error	Formatting error in the imported file.
IP Address overlapped	The LAN contains a duplicate IP address
Invalid IP Address	The IP address is invalid.
No unused IP Address	No IP addresses within the specified range are available for automatic assignment.
No User name	No user name was specified.
Authentication failed (#1)	Failure of administrator account authentication.
Operation not allowed (#2)	Network configuration failed due to concurrent operation of the network menu.
Unknown error (#3)	The projector did not accept the network settings for some unknown reason.
Designated IP Address not set (#4)	Network configuration was performed, but the designated IP address was not set.
DHCP not serve IP Address (#5)	DHCP was enabled, but no IP address was assigned.
Response timeout (#6)	Network settings were made, but communication from the projector timed out.

## ■ Transferring Settings to Multi-Projector Monitoring and Control Software

Settings made using this software can be imported into multi-projector monitoring and control software. The import procedure is as follows.

1. Select the network, search for the projector, and click the [Convert (MMCS)] button.

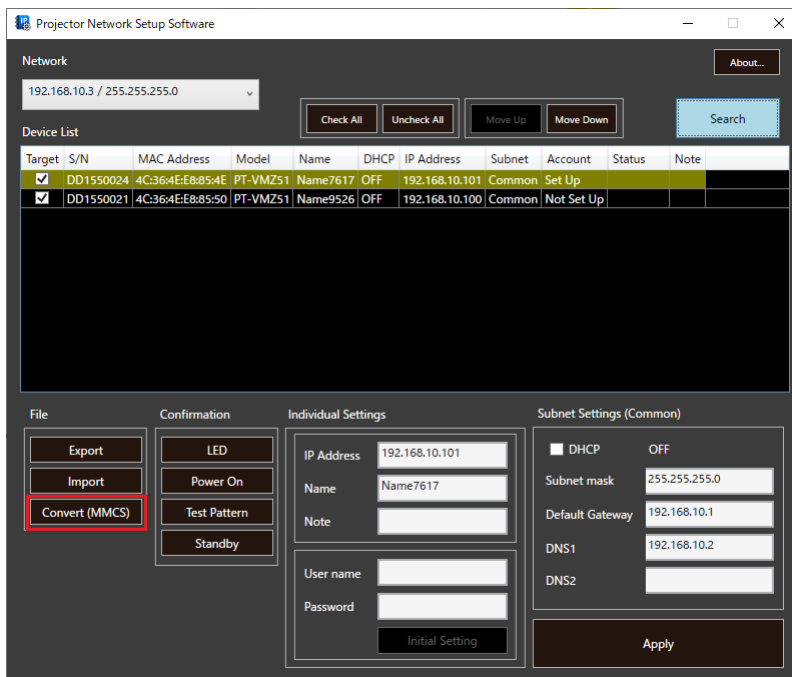

- A UGK file is created with the name “MMCS” followed by numbers indicating the year, month, day, hour, minute, and second (e.g., MMCS20180412170704.ugk).
2. Start the multi-projector monitoring and control software, and then import the projector registration information file (extension: .ugk) from the [Device Management] > [Importing an external setup file] > [Geometry Manager Pro] menu.
    - Projector information is imported into the multi-projector monitoring and control software.

## ■ Trademarks

Windows and Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.