


# Operating Guide

Remote Operation Panel

Model No.

## AK-HRP1005G

Read this document when using the AK-HRP1005G Remote Operation Panel in conjunction with AG-CX350 Memory Card Camera-Recorder.

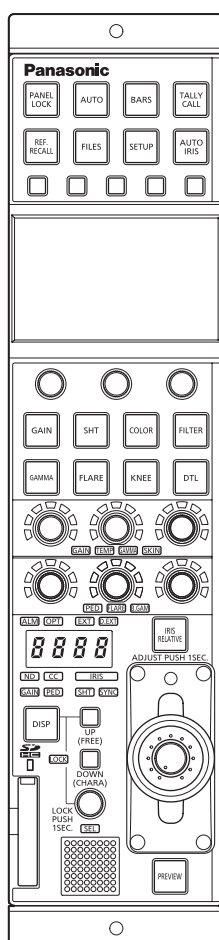

For details of operating Remote Operation Panel AK-HRP1005G, please visit the Panasonic website (<https://pro-av.panasonic.net/manual/en/index.html>), and refer to the Operating Instructions (HTML or PDF).

# Panasonic

ENGLISH

DVQP2695ZA

# Table of Contents

|  |          |
|--|----------|
| <b>Connecting the Unit to AG-CX350 Cameras</b> ..... | <b>3</b> |
| Connections .....                                    | 3        |
| Compatible Functions List .....                      | 4        |
| <b>ROP Menu (during AG-CX350 Connection)</b> .....   | <b>8</b> |
| ROP menu list .....                                  | 8        |
| 01 SCENE .....                                       | 13       |
| 02 SHUTTER SPEED .....                               | 14       |
| 03 FILTER .....                                      | 14       |
| 04 PEDESTAL .....                                    | 15       |
| 05 CHROMA .....                                      | 15       |
| 06 GAIN .....  | 16       |
| 07 COLOR TEMP .....                                  | 16       |
| 08 WHITE BALANCE .....                               | 17       |
| 09 GAMMA .....                                       | 18       |
| 10 KNEE .....  | 19       |
| 11 WHITE CLIP .....                                  | 20       |
| 12 DRS .....   | 20       |
| 13 DETAIL .....                                      | 21       |
| 14 SKIN TONE DTL .....                               | 22       |
| 15 MATRIX .....                                      | 23       |
| 16 COLOR CORRECTION .....                            | 24       |
| 17 IRIS RELATIVE .....                               | 26       |
| 18 SYSTEM CAM .....                                  | 27       |
| 19 CAMERA MENU CONTROL .....                         | 27       |
| 20 ROP SETTING .....                                 | 28       |
| 21 CONNECT SETTING .....                             | 28       |
| 22 ROP IP SETTING .....                              | 29       |
| 23 CAMERA IP SETTING .....                           | 29       |
| 24 AUTO IRIS SETTING .....                           | 29       |
| 25 SWITCHER LINK .....                               | 29       |
| 26 AW CONTROLLER LINK .....                          | 29       |

# Connecting the Unit to AG-CX350 Cameras

## Connections

- Use a LAN cable to connect the <REMOTE> connector at the rear of the AG-CX350 to the <LAN> connector of the AK-HRP1005G.
- Set the connection setting to “LAN(AG)” in the [CONNECT SETTING] menu.

CONNECT SETTING

1 / 17

CONNECT MODE(push)

CAM1

LAN  
(AG)

CAM2

NON

CAM3

NON

CONNECT MODE(push)

CAM4

NON

CAM5


NON

CAM6

NON

## Compatible Functions List

When the unit is used in conjunction with an AG-CX350 Memory Card Camera-Recorder, a portion of the unit's button, dial, and other control functions will be limited or disabled. Be sure to refer to the following table.

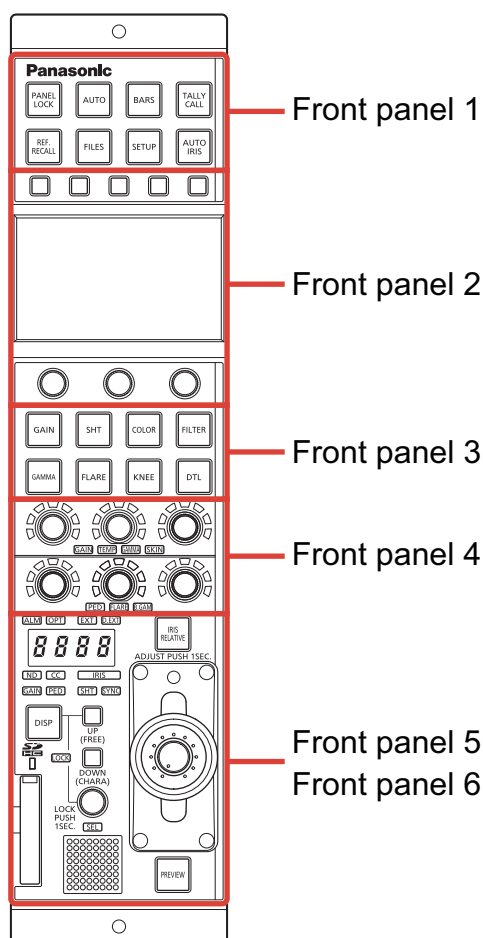

| Number        | Part name                | ✓ : Enabled<br>✕: Disabled | Remarks  |
|---------------|--------------------------|----------------------------|--|
| Front panel 1 | [PANEL LOCK] button      | ✓                          |  |
|               | [AUTO] button            | ✓                          | This does not function when the auto setup setting is enabled. |
|               | [BARS] button            | ✓                          | Controls ON/OFF of color bar signal output.                    |
|               | [TALLY/CALL] lamp/button | ✓                          | Tally only operation is possible.                              |
|               | [REF. RECALL] button     | ✓                          | Press and hold this to start/stop recording.                   |
|               | [FILES] button           | ✓                          | Press and hold this to switch to the scene selection menu.     |
|               | [SETUP] button           | ✓                          |  |
|               | [AUTO IRIS] button       | ✓                          |  |
| Front panel 2 | Function buttons         | ✓                          |  |
|               | LCD panel                | ✓                          |  |
|               | Menu operation dials     | ✓                          |  |

| Number        | Part name       | ✓ : Enabled<br>×: Disabled | Remarks  |
|---------------|-----------------|----------------------------|--|
| Front panel 3 | [GAIN] button   | ✓                          | When this is set to ON, the [GAIN] menu is displayed on the LCD panel.   |
|               | [SHT] button    | ✓                          | When this is set to ON, the [SHUTTER SPEED] menu is displayed on the LCD panel.  |
|               | [COLOR] button  | ✓                          | The menus will switch with each press of the button. [WHITE BALANCE] > [CHROMA] > [MATRIX] > [COLOR CORRECTION] > Menu OFF (status screen) |
|               | [FILTER] button | ✓                          | When this is set to ON, the [FILTER] menu is displayed on the LCD panel.   |
|               | [GAMMA] button  | ✓                          | When this is set to ON, the [GAMMA] menu is displayed on the LCD panel.  |
|               | [FLARE] button  | ×                          |  |
|               | [KNEE] button   | ✓                          | The menus will switch with each press of the button. [KNEE] > [WHITE CLIP] > Menu OFF (status screen)                                      |
|               | [DTL] button    | ✓                          | The menus will switch with each press of the button. [DETAIL] > [SKIN TONE DTL] > Menu OFF (status screen)                                 |

| Number        | Part name  | ✓ : Enabled<br>×: Disabled | Remarks  |
|---------------|--|----------------------------|--|
| Front panel 4 | [GAIN], [TEMP], [GAMMA], [SKIN] adjustment block | ✓                          | <p><b>When [GAIN] is lit</b><br/>Adjusts the following.</p> <ul style="list-style-type: none"> <li>Red (R) adjustment dial<br/>[WHITE BALANCE] &gt; [GAIN R]</li> <li>Blue (B) adjustment dial<br/>[WHITE BALANCE] &gt; [GAIN B]</li> </ul> <p><b>When [TEMP] is lit</b><br/>Adjusts the following.</p> <ul style="list-style-type: none"> <li>Red (R) adjustment dial<br/>[COLOR TEMP] &gt; [GAIN R]</li> <li>Green (G) adjustment dial<br/>[COLOR TEMP] &gt; [AXIS G]</li> <li>Blue (B) adjustment dial<br/>[COLOR TEMP] &gt; [GAIN B]</li> </ul> <p><b>When [GAMMA] is lit</b><br/>Adjusts the following.</p> <ul style="list-style-type: none"> <li>Green (G) adjustment dial<br/>[GAMMA] &gt; [MASTER GAMMA]</li> </ul> <p><b>When [SKIN] is lit</b><br/>Adjusts the following.</p> <ul style="list-style-type: none"> <li>Red (R) adjustment dial<br/>[SKIN TONE DTL] &gt; [I CENTER]</li> <li>Green (G) adjustment dial<br/>[SKIN TONE DTL] &gt; [Q WIDTH]</li> </ul> |
|               | [PED], [FLARE], [B.GAM] adjustment block         | ✓                          | <p><b>When [PED] is lit</b><br/>Adjusts the following.</p> <ul style="list-style-type: none"> <li>Red (R) adjustment dial<br/>[PEDESTAL] &gt; [PED R]</li> <li>Green (G) adjustment dial<br/>[PEDESTAL] &gt; [MASTER PED]</li> <li>Blue (B) adjustment dial<br/>[PEDESTAL] &gt; [PED B]</li> </ul> <p><b>When [FLARE] is lit</b><br/>FLARE cannot be controlled. “-” is displayed.</p> <p><b>When [B.GAM] is lit</b><br/>Adjusts the following.</p> <ul style="list-style-type: none"> <li>Green (G) adjustment dial<br/>[GAMMA] &gt; [BLACK GAMMA]</li> <li>Blue (B) adjustment dial<br/>[GAMMA] &gt; [B.GAMMA RANGE]</li> </ul>  |

| Number        | Part name                    | ✓ : Enabled<br>×: Disabled | Remarks   |
|---------------|------------------------------|----------------------------|---|
| Front panel 5 | [ALM] indicator              | ✓                          |   |
|               | [OPT] indicator              | ×                          |   |
|               | [EXT] indicator              | ×                          |   |
|               | [D.EXT] indicator            | ×                          |   |
|               | Adjustment value display     | ✓                          | Displays the adjustment values except for CC.<br><b>When the [SHT] indicator and [SYNC] indicator are lit</b><br>Displays the following. <ul style="list-style-type: none"> <li>Fixed shutter is selected (dot lights at bottom right)<br/>Numerical value for the denominator of the shutter speed</li> <li>Syncro scan (time display) is selected<br/>Numerical value for the denominator of the shutter speed (when the value is four or more digits, the digits after the decimal point are not displayed)</li> <li>Syncro scan (shutter open angle display) is selected<br/>Setting value of shutter open angle</li> </ul> |
|               | [ND] indicator               | ✓                          | Displayed only. Cannot be adjusted.   |
|               | [CC] indicator               | ✓                          | Lights but “-” is displayed. Cannot be adjusted.  |
|               | [IRIS] indicator             | ✓                          |   |
|               | [GAIN] indicator             | ✓                          |   |
|               | [PED] indicator              | ✓                          |   |
|               | [SHT] indicator              | ✓                          |   |
|               | [SYNC] indicator             | ✓                          |   |
|               | [DISP] button                | ✓                          |   |
|               | [UP (FREE)] button           | ✓                          |   |
|               | [DOWN (CHARA)] button        | ✓                          |   |
| Front panel 6 | [LOCK] indicator             | ✓                          |   |
|               | [SEL] dial                   | ✓                          |   |
|               | Memory card slot             | ✓                          |   |
|               | Memory card access indicator | ✓                          |   |
|               | Camera number/tally display  | ✓                          |   |
|               | [IRIS RELATIVE] button       | ✓                          |   |
|               | Torque adjustment screw      | ✓                          |   |
|               | IRIS lever                   | ✓                          |   |
|               | Master pedestal dial         | ✓                          |   |
|               | [PREVIEW] button             | ×                          |   |

## ROP Menu (during AG-CX350 Connection)

### ROP menu list

When an AG-CX350 Memory Card Camera-Recorder is connected, the ROP menu will be as follows. For setting values related to the camera, refer to the Operating Instructions for the camera.

For details on menu operations, refer to the following sections in the Operating Instructions.

➡ “Displaying menus”

➡ “Basic menu operations”



#### NOTE

- To perform menu operations, upgrade the version of the unit system to 5.10-00-0.00 or later.
- The setting values of functions that are not supported are indicated as “—”.

|                  |                    |                                      |
|------------------|--------------------|--------------------------------------|
| 01 SCENE         | SCENE1             | ➡ “SCENE1” (see page 13)             |
|                  | SCENE2             | ➡ “SCENE2” (see page 13)             |
|                  | SCENE3             | ➡ “SCENE3” (see page 13)             |
|                  | SCENE4             | ➡ “SCENE4” (see page 13)             |
|                  | SCENE5             | ➡ “SCENE5” (see page 13)             |
|                  | SCENE6             | ➡ “SCENE6” (see page 13)             |
| 02 SHUTTER SPEED | SHUTTER            | ➡ “SHUTTER” (see page 14)            |
|                  | SPEED MODE         | ➡ “SPEED MODE” (see page 14)         |
|                  | SYNC TYPE          | ➡ “SYNC TYPE” (see page 14)          |
|                  | SPEED              | ➡ “SPEED” (see page 14)              |
|                  | AUTO SHUTTER       | ➡ “AUTO SHUTTER” (see page 14)       |
|                  | AUTO SHUTTER LIMIT | ➡ “AUTO SHUTTER LIMIT” (see page 14) |
|                  | AUTO SHUTTER POINT | ➡ “AUTO SHUTTER POINT” (see page 14) |
| 03 FILTER        | ND                 | ➡ “ND” (see page 14)                 |
|                  | CC                 | ➡ “CC” (see page 14)                 |
| 04 PEDESTAL      | M.PED              | ➡ “M.PED” (see page 15)              |
|                  | OFFSET             | ➡ “OFFSET” (see page 15)             |
|                  | PED R              | ➡ “PED R” (see page 15)              |
|                  | PED G              | ➡ “PED G” (see page 15)              |
|                  | PED B              | ➡ “PED B” (see page 15)              |
| 05 CHROMA        | LEVEL %            | ➡ “LEVEL %” (see page 15)            |
|                  | PHASE              | ➡ “PHASE” (see page 15)              |
| 06 GAIN          | GAIN               | ➡ “GAIN” (see page 16)               |
|                  | AGC                | ➡ “AGC” (see page 16)                |
|                  | AGC LIMIT          | ➡ “AGC LIMIT” (see page 16)          |
|                  | AGC POINT          | ➡ “AGC POINT” (see page 16)          |
| 07 COLOR TEMP    | COLOR TEMP         | ➡ “COLOR TEMP” (see page 16)         |
|                  | GAIN R             | ➡ “GAIN R” (see page 16)             |
|                  | AXIS G             | ➡ “AXIS G” (see page 16)             |
|                  | GAIN B             | ➡ “GAIN B” (see page 16)             |



|                  |                     |                                       |
|------------------|---------------------|---------------------------------------|
| 08 WHITE BALANCE | W.BAL SELECT        | ➡ "W.BAL SELECT" (see page 17)        |
|                  | GAIN OFFSET         | ➡ "GAIN OFFSET" (see page 17)         |
|                  | GAIN R              | ➡ "GAIN R" (see page 17)              |
|                  | GAIN B              | ➡ "GAIN B" (see page 17)              |
|                  | ATW SPEED           | ➡ "ATW SPEED" (see page 17)           |
|                  | ATW TARGET R        | ➡ "ATW TARGET R" (see page 17)        |
|                  | ATW TARGET B        | ➡ "ATW TARGET B" (see page 17)        |
| 09 GAMMA         | MODE                | ➡ "MODE" (see page 18)                |
|                  | GAMMA               | ➡ "GAMMA" (see page 18)               |
|                  | F-REC DYNMC LV      | ➡ "F-REC DYNMC LV" (see page 18)      |
|                  | F-REC BLK.S LV      | ➡ "F-REC BLK.S LV" (see page 18)      |
|                  | V-REC K.SLOPE       | ➡ "V-REC K.SLOPE" (see page 18)       |
|                  | V-REC K.POINT       | ➡ "V-REC K.POINT" (see page 18)       |
|                  | BLACK GAMMA         | ➡ "BLACK GAMMA" (see page 18)         |
| 10 KNEE          | B.GAMMA RANGE       | ➡ "B.GAMMA RANGE" (see page 18)       |
|                  | MODE                | ➡ "MODE" (see page 19)                |
|                  | POINT               | ➡ "POINT" (see page 19)               |
|                  | SLOPE               | ➡ "SLOPE" (see page 19)               |
|                  | A.KNEE RSPNS        | ➡ "A.KNEE RSPNS" (see page 19)        |
|                  | HLG KNEE SW         | ➡ "HLG KNEE SW" (see page 19)         |
|                  | HLG KNEE POINT      | ➡ "HLG KNEE POINT" (see page 19)      |
|                  | HLG KNEE SLOPE      | ➡ "HLG KNEE SLOPE" (see page 19)      |
| 11 WHITE CLIP    | H.COLOR SW          | ➡ "H.COLOR SW" (see page 19)          |
|                  | WHITE CLIP SW       | ➡ "WHITE CLIP SW" (see page 20)       |
| 12 DRS           | WHITE CLIP LEVEL(%) | ➡ "WHITE CLIP LEVEL(%)" (see page 20) |
|                  | DRS                 | ➡ "DRS" (see page 20)                 |
| 13 DETAIL        | EFFECT DEPTH        | ➡ "EFFECT DEPTH" (see page 20)        |
|                  | DTL                 | ➡ "DTL" (see page 21)                 |
|                  | CORING              | ➡ "CORING" (see page 21)              |
|                  | V.DTL LEVEL         | ➡ "V.DTL LEVEL" (see page 21)         |
|                  | FREQ.               | ➡ "FREQ." (see page 21)               |
|                  | LEVEL DEPEND.       | ➡ "LEVEL DEPEND." (see page 21)       |
|                  | KNEE APE LV         | ➡ "KNEE APE LV" (see page 21)         |
|                  | GAIN(+)             | ➡ "GAIN(+)" (see page 21)             |
|                  | GAIN(-)             | ➡ "GAIN(-)" (see page 21)             |
| 14 SKIN TONE DTL | DTL SW              | ➡ "DTL SW" (see page 21)              |
|                  | SKIN TONE DTL A     | ➡ "SKIN TONE DTL A" (see page 22)     |
|                  | SKIN TONE DTL B     | ➡ "SKIN TONE DTL B" (see page 22)     |
|                  | SKIN TONE DTL C     | ➡ "SKIN TONE DTL C" (see page 22)     |
|                  | DETECT TBL          | ➡ "DETECT TBL" (see page 22)          |
|                  | EFFECT              | ➡ "EFFECT" (see page 22)              |
|                  | I CENTER            | ➡ "I CENTER" (see page 22)            |
|                  | I WIDTH             | ➡ "I WIDTH" (see page 22)             |
|                  | Q WIDTH             | ➡ "Q WIDTH" (see page 22)             |
|                  | Q PHASE             | ➡ "Q PHASE" (see page 22)             |

|                     |                 |   |
|---------------------|-----------------|---|
| 15 MATRIX           | TYPE            | ➡ "TYPE" (see page 23)  |
|                     | ADAPTIVE MATRIX | ➡ "ADAPTIVE MATRIX" (see page 23)   |
|                     | R-G             | ➡ "R-G" (see page 23)   |
|                     | R-B             | ➡ "R-B" (see page 23)   |
|                     | G-R             | ➡ "G-R" (see page 23)   |
|                     | G-B             | ➡ "G-B" (see page 23)   |
|                     | B-R             | ➡ "B-R" (see page 23)   |
|                     | B-G             | ➡ "B-G" (see page 23)   |
| 16 COLOR CORRECTION | SAT R           | ➡ "SAT R" (see page 25)   |
|                     | PHASE R         | ➡ "PHASE R" (see page 25)   |
|                     | SAT R-R-Mg      | ➡ "SAT R-R-Mg" (see page 25)  |
|                     | PHASE R-R-Mg    | ➡ "PHASE R-R-Mg" (see page 25)  |
|                     | SAT R-Mg        | ➡ "SAT R-Mg" (see page 25)  |
|                     | PHASE R-Mg      | ➡ "PHASE R-Mg" (see page 25)  |
|                     | SAT Mg          | ➡ "SAT Mg" (see page 25)  |
|                     | PHASE Mg        | ➡ "PHASE Mg" (see page 25)  |
|                     | SAT Mg-B        | ➡ "SAT Mg-B" (see page 25)  |
|                     | PHASE Mg-B      | ➡ "PHASE Mg-B" (see page 25)  |
|                     | SAT B           | ➡ "SAT B" (see page 25)   |
|                     | PHASE B         | ➡ "PHASE B" (see page 25)   |
|                     | SAT B-Cy        | ➡ "SAT B-Cy" (see page 25)  |
|                     | PHASE B-Cy      | ➡ "PHASE B-Cy" (see page 25)  |
|                     | SAT Cy          | ➡ "SAT Cy" (see page 25)  |
|                     | PHASE Cy        | ➡ "PHASE Cy" (see page 25)  |
|                     | SAT Cy-G        | ➡ "SAT Cy-G" (see page 25)  |
|                     | PHASE Cy-G      | ➡ "PHASE Cy-G" (see page 25)  |
|                     | SAT G           | ➡ "SAT G" (see page 25)   |
|                     | PHASE G         | ➡ "PHASE G" (see page 25)   |
|                     | SAT G-YI        | ➡ "SAT G-YI" (see page 25)  |
|                     | PHASE G-YI      | ➡ "PHASE G-YI" (see page 26)  |
|                     | SAT G-YI-YI     | ➡ "SAT G-YI-YI" (see page 26)   |
|                     | PHASE G-YI-YI   | ➡ "PHASE G-YI-YI" (see page 26)   |
|                     | SAT YI          | ➡ "SAT YI" (see page 26)  |
|                     | PHASE YI        | ➡ "PHASE YI" (see page 26)  |
|                     | SAT YI-YI-R     | ➡ "SAT YI-YI-R" (see page 26)   |
|                     | PHASE YI-YI-R   | ➡ "PHASE YI-YI-R" (see page 26)   |
|                     | SAT YI-R        | ➡ "SAT YI-R" (see page 26)  |
|                     | PHASE YI-R      | ➡ "PHASE YI-R" (see page 26)  |
|                     | SAT YI-R-R      | ➡ "SAT YI-R-R" (see page 26)  |
|                     | PHASE YI-R-R    | ➡ "PHASE YI-R-R" (see page 26)  |
| 17 IRIS RELATIVE    | SENSE           | Refer to the following section in the Operating Instructions.<br>➡ "29 IRIS RELATIVE" |
|                     | COARSE          |   |
|                     | RELATIVE        |   |
| 18 SYSTEM CAM       | TALLY CONTROL   | ➡ "TALLY CONTROL" (see page 27)   |
|                     | TALLY INPUT     | ➡ "TALLY INPUT" (see page 27)   |
|                     | TALLY SIGNAL    | ➡ "TALLY SIGNAL" (see page 27)  |
|                     | TALLY CONT MD   | ➡ "TALLY CONT MD" (see page 27)   |

|                        |                                  |   |
|------------------------|----------------------------------|---|
| 19 CAMERA MENU CONTROL | MENU ON/OFF                      | ➡ "MENU ON/OFF" (see page 27)   |
|                        | CURSOR/PARAMETER                 | ➡ "CURSOR/PARAMETER" (see page 27)  |
|                        | EXECUTE                          | ➡ "EXECUTE" (see page 27)   |
|                        | MENU EXIT                        | ➡ "MENU EXIT" (see page 27)   |
| 20 ROP SETTING         | IRIS LEV MODE                    | ➡ "20 ROP SETTING" (see page 28)  |
|                        | M.PED CONT                       | Refer to the following section in the Operating Instructions.<br>➡ "37 ROP SETTING" |
|                        | LOCK SELECT                      |   |
|                        | AUTO BUTTON                      |   |
|                        | G/M PED VOL                      |   |
|                        | FREE+LOCK                        |   |
|                        | CAM SEL                          |   |
|                        | DTL BUTTON                       |   |
|                        | SKIN VOL                         |   |
|                        | LCD BRIGHT                       |   |
|                        | PANEL BRIGHT                     |   |
|                        | B.GAMMA VOL                      |   |
|                        | BUZZER                           |   |
|                        | PERIOD                           |   |
|                        | CYCLE                            |   |
|                        | STD POSITION M.GAIN              |   |
|                        | STD POSITION VAR                 |   |
|                        | STD POSITION ND                  |   |
|                        | STD POSITION CC                  |   |
|                        | IRIS PRIORITY                    |   |
|                        | ROP DATA SAVE                    |   |
|                        | ROP DATA LOAD                    |   |
|                        | SD CARD FORMAT                   |   |
|                        | INITIAL with NW                  |   |
|                        | INITIAL                          |   |
|                        | UPGRADE                          |   |
|                        | IRIS CALIBRATION TOP             |   |
|                        | IRIS CALIBRATION BOTTOM          |   |
|                        | SYSTEM VERSION                   |   |
|                        | SOFT VERSION                     |   |
|                        | FPGA VERSION                     |   |
| 21 CONNECT SETTING     | CONNECT MODE(push) CAM1          | ➡ "CONNECT MODE(push) CAM1" (see page 28)   |
|                        | CONNECT MODE(push) CAM2 to CAM99 | ➡ "CONNECT MODE(push) CAM2 to CAM99" (see page 28)                                  |

|                       |                          |  |
|-----------------------|--------------------------|--|
| 22 ROP IP SETTING     | IP ADDRESS 1             | Refer to the following section in the Operating Instructions.<br>➡ "39 ROP IP SETTING"                           |
|                       | IP ADDRESS 2             |  |
|                       | IP ADDRESS 3             |  |
|                       | IP ADDRESS 4             |  |
|                       | IP ADDRESS PORT          |  |
|                       | IP ADDRESS UPLOAD        |  |
|                       | SUBNET MASK 1            |  |
|                       | SUBNET MASK 2            |  |
|                       | SUBNET MASK 3            |  |
|                       | SUBNET MASK 4            |  |
|                       | SUBNET MASK UPLOAD       |  |
|                       | DEFAULT GATEWAY          |  |
|                       | DEFAULT GATEWAY UPLOAD   |  |
|                       | MAC ADDRESS              |  |
| 23 CAMERA IP SETTING  | CAM1 to CAM99 IP ADDRESS | Refer to the following section in the Operating Instructions.<br>➡ "40 CAMERA IP SETTING"                        |
|                       | CAM1 to CAM99 PORT       |  |
|                       | CAM1 to CAM99 INF UPLOAD |  |
| 24 AUTO IRIS SETTING  | AUTO IRIS LEVEL          | ➡ "AUTO IRIS LEVEL" (see page 29)  |
|                       | AUTO IRIS SPEED          | ➡ "AUTO IRIS SPEED" (see page 29)  |
|                       | AUTO IRIS WINDOW         | ➡ "AUTO IRIS WINDOW" (see page 29)   |
| 25 SWITCHER LINK      | SWITCHER IP ADDRESS      | Refer to the following sections in "Functions Added by Version Updates".<br>➡ "Functions Linking with AV-HS6000" |
|                       | SWITCHER UDP PORT        |  |
|                       | INFO UPLOAD              |  |
|                       | SWITCHER LINK            |  |
|                       | TALLY RECEIVE            |  |
|                       | PREVIEW                  |  |
|                       | TALLY ACTION MATERIAL    |  |
|                       | TALLY ACTION CAM No.     |  |
| 26 AW CONTROLLER LINK | RECEIVE PORT             | Refer to the following sections in "Functions Added by Version Updates".<br>➡ "Functions Linking with AW-RP150"  |
|                       | INFO UPLOAD              |  |
|                       | AW CONT LINK             |  |

01 SCENE

SCENE1 / 1

SCENE1 (push)

ON

SCENE2 (push)

OFF

SCENE3 (push)

OFF

SCENE4 (push)

OFF

SCENE5 (push)

OFF

SCENE6 (push)

OFF

| Item   | Setting details   |
|--------|---|
| SCENE1 | <div>Sets a scene file to ON/OFF.</div> <ul style="list-style-type: none"><li>When a scene file is set to ON, the other scene files are set to OFF.</li></ul> |
| SCENE2 |   |
| SCENE3 |   |
| SCENE4 |   |
| SCENE5 |   |
| SCENE6 |   |

## 02 SHUTTER SPEED

**SHUTTER SPEED** 1 / 2

|                      |                          |                         |
|----------------------|--------------------------|-------------------------|
| <b>SHUTTER</b><br>ON | <b>SPEED MODE</b><br>FIX | <b>SYNC TYPE</b><br>SEC |
|----------------------|--------------------------|-------------------------|

---

**SPEED**  
100

**SHUTTER SPEED** 2 / 2

---

**AUTO SHUTTER LIMIT**

|                       |              |                      |
|-----------------------|--------------|----------------------|
| <b>SHUTTER</b><br>OFF | <b>1/250</b> | <b>POINT</b><br>F8.0 |
|-----------------------|--------------|----------------------|

| Item               | Setting details  |
|--------------------|--|
| SHUTTER            | Switches the shutter function ON/OFF.  |
| SPEED MODE         | Switches between fixed shutter and synchro scan.   |
| SYNC TYPE          | Switches the unit of the shutter setting.  |
| SPEED              | Sets the shutter speed in the unit selected in [SYNC TYPE].  |
| AUTO SHUTTER       | Switches the auto shutter function ON/OFF.   |
| AUTO SHUTTER LIMIT | Sets the maximum level of the auto shutter speed.  |
| AUTO SHUTTER POINT | Sets the F value to switch control from auto iris to auto shutter during the auto shutter operation. |

## 03 FILTER

**FILTER** 1 / 1

|                |                |
|----------------|----------------|
| <b>ND</b><br>1 | <b>CC</b><br>— |
|----------------|----------------|

| Item | Setting details  |
|------|--|
| ND   | Displays the information for the ND filter (the settings cannot be changed).                   |
| CC   | Displays the information for the CC filter (the settings cannot be changed). "—" is displayed. |

## 04 PEDESTAL

PEDESTAL

1 / 1

M.PED

+16

OFFSET

OFF

PED

R

0

G

0

B

0

| Item          | Setting details   |
|---------------|---|
| <b>M.PED</b>  | Adjusts the black level (master pedestal level adjustment).   |
| <b>OFFSET</b> | Sets the R channel, G channel, and B channel pedestal levels when the auto black balance is adjusted. |
| <b>PED R</b>  | Adjusts the R channel pedestal.   |
| <b>PED G</b>  | Adjusts the G channel pedestal.   |
| <b>PED B</b>  | Adjusts the B channel pedestal.   |

## 05 CHROMA

CHROMA

1 / 1

LEVEL %

0

PHASE

0


| Item           | Setting details                           |
|----------------|---|
| <b>LEVEL %</b> | Sets the color intensity of images.       |
| <b>PHASE</b>   | Finely adjusts the color phase of images. |

06 GAIN



| Item      | Setting details  |
|-----------|--|
| GAIN      | Adjusts the gain of video.   |
| AGC       | Enables or disables the auto gain function.  |
| AGC LIMIT | Sets the maximum gain-up amount when [AGC] is set to "ON".                         |
| AGC POINT | Sets the F value to switch control from auto iris to auto gain when [AGC] is "ON". |

07 COLOR TEMP

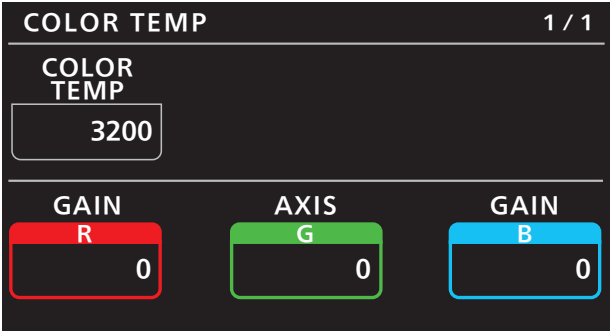

| Item       | Setting details  |
|------------|--|
| COLOR TEMP | Sets the color temperature.                                |
| GAIN R     | Sets the red correction level for the color temperature.   |
| AXIS G     | Sets the green correction level for the color temperature. |
| GAIN B     | Sets the blue correction level for the color temperature.  |



## 08 WHITE BALANCE

WHITE BALANCE1 / 2

W.BAL SELECT

3200K

GAIN OFFSET

OFF

GAIN

R

0

B

0

WHITE BALANCE2 / 2

ATW

SPEED

NORMAL

TARGET R

0

TARGET B

0

| Item         | Setting details  |
|--------------|--|
| W.BAL SELECT | Sets the mode for the white balance.   |
| GAIN OFFSET  | Sets the value of the R channel gain and B channel gain for when [W.BAL SELECT] is set to A (AWB A) or B (AWB B) and automatic white balance is performed. |
| GAIN R       | Adjusts the R channel gain.  |
| GAIN B       | Adjusts the B channel gain.  |
| ATW SPEED    | Sets the control speed of the ATW function.  |
| ATW TARGET R | Finely adjusts the R channel output when converged in the auto tracking white balance operation.   |
| ATW TARGET B | Finely adjusts the B channel output when converged in the auto tracking white balance operation.   |

## 09 GAMMA

**GAMMA**
1 / 2

---

**MODE**  

HD

**GAMMA**  

0.45

---

**F-REC**  
**DYNMC LV**  

600

**BLK.S LV**  

0

**GAMMA**
2 / 2

---

**V-REC**  
**K.SLOPE**  

500

**K.POINT**  

30

---

**BLACK GAMMA**  

0

**B.GAMMA RANGE**  

1

| Item                  | Setting details  |
|-----------------------|--|
| <b>MODE</b>           | Selects the type of gamma curve.   |
| <b>GAMMA</b>          | Adjusts the gamma correction level. This is enabled when [MODE] is other than "HLG". |
| <b>F-REC DYNMC LV</b> | Sets the dynamic range. This is enabled when [MODE] is "F-REC" (FILM REC).           |
| <b>F-REC BLK.S LV</b> | Sets the black stretch. This is enabled when [MODE] is "F-REC" (FILM REC).           |
| <b>V-REC K.SLOPE</b>  | Sets the knee slope. This is enabled when [MODE] is "V-REC" (VIDEO REC).             |
| <b>V-REC K.POINT</b>  | Sets the knee point. This is enabled when [MODE] is "V-REC" (VIDEO REC).             |
| <b>BLACK GAMMA</b>    | Sets the gamma curve for dark areas.   |
| <b>B.GAMMA RANGE</b>  | Sets the maximum level for compression/expansion.                                    |

## 10 KNEE

KNEE 1 / 2

MODE

AUTO

POINT

93.0

SLOPE

99

A.KNEE RSPNS

4

KNEE 2 / 2

SW

OFF

HLG KNEE POINT

55

SLOPE

10

H.COLOR SW

OFF

| Item                  | Setting details   |
|-----------------------|---|
| <b>MODE</b>           | Sets the operating mode for gradation compression (knee).   |
| <b>POINT</b>          | Sets the compression level (knee point) position for high-brightness video signals.<br>This is enabled when [MODE] in the [GAMMA] menu is other than "HLG", and [MODE] is "MANUAL". |
| <b>SLOPE</b>          | Sets the knee slope.<br>This is enabled when [MODE] in the [GAMMA] menu is other than "HLG", and [MODE] is "MANUAL".  |
| <b>A.KNEE RSPNS</b>   | Sets the auto knee response speed.<br>This is enabled when [MODE] in the [GAMMA] menu is other than "HLG".  |
| <b>HLG KNEE SW</b>    | Enables or disables knee operation for HLG.<br>This is enabled when [MODE] in the [GAMMA] menu is "HLG".  |
| <b>HLG KNEE POINT</b> | Sets the knee point position for HLG.<br>This is enabled when [MODE] in the [GAMMA] menu is "HLG".  |
| <b>HLG KNEE SLOPE</b> | Sets the knee slope for HLG.<br>This is enabled when [MODE] in the [GAMMA] menu is "HLG".   |
| <b>H.COLOR SW</b>     | This does not function with AG-CX350.   |

## 11 WHITE CLIP

WHIE CLIP

1 / 1

---

WHITE CLIP

SW

LEVEL(%)

OFF

109

---

| Item                       | Setting details   |
|----------------------------|---|
| <b>WHITE CLIP SW</b>       | Enables or disables the white clip function.<br>This is enabled when [MODE] in the [GAMMA] menu is other than "HLG".                |
| <b>WHITE CLIP LEVEL(%)</b> | Sets the white clip level.<br>This is enabled when [WHITE CLIP SW] is "ON" and when [MODE] in the [GAMMA] menu is other than "HLG". |

## 12 DRS

DRS

1 / 1

---

DRS

EFFECT DEPTH

OFF

1

---

| Item                | Setting details   |
|---------------------|---|
| <b>DRS</b>          | Switches the dynamic range stretcher function, which performs correction appropriately when video with high light/dark contrast is displayed, ON/OFF. |
| <b>EFFECT DEPTH</b> | Sets the compression level for high-brightness areas of the dynamic range stretcher function.   |

## 13 DETAIL

DETAIL
1 / 3

DTL
0

CORING
15

V.DTL LEVEL
0

FREQ.
0

DETAIL
2 / 3

LEVEL DEPEND.
0

KNEE APE LV
2

GAIN(+)
0

GAIN(-)
0

DETAIL
3 / 3

DTL SW
ON

| Item                 | Setting details  |
|----------------------|--|
| <b>DTL</b>           | Adjusts the contour correction level (master).<br>This is enabled when [DTL SW] is "ON".   |
| <b>CORING</b>        | Sets the level of signal (including noise) that does not activate the detail effect.<br>This is enabled when [DTL SW] is "ON".   |
| <b>V.DTL LEVEL</b>   | Adjusts the vertical contour correction level.<br>This is enabled when [DTL SW] is "ON".   |
| <b>FREQ.</b>         | Sets the thickness (boost frequency) of the detail.<br>This is enabled when [DTL SW] is "ON".  |
| <b>LEVEL DEPEND.</b> | Compresses the detail of dark areas when detail of the brightness signal is emphasized. The larger the setting value the more that detail of bright areas is compressed.<br>This is enabled when [DTL SW] is "ON". |
| <b>KNEE APE LV</b>   | Sets the detail level of high-brightness areas (extremely bright areas).<br>This is enabled when [DTL SW] is "ON".   |
| <b>GAIN(+)</b>       | Sets the detail level of the plus direction (to make brighter).<br>This is enabled when [DTL SW] is "ON".  |
| <b>GAIN(-)</b>       | Sets the detail level of the minus direction (to make darker).<br>This is enabled when [DTL SW] is "ON".   |
| <b>DTL SW</b>        | Sets the detail function (video contour adjustment) to ON/OFF.   |

## 14 SKIN TONE DTL

**SKIN TONE DTL** 1 / 2

---

**SKIN TONE DTL**

A OFF B OFF C OFF

---

DETECT TBL EFFECT

A 16

**SKIN TONE DTL** 2 / 2

---

I CENTER I WIDTH

35 2

---

Q WIDTH Q PHASE

2 0

| Item                   | Setting details  |
|------------------------|--|
| <b>SKIN TONE DTL A</b> | Sets the skin color table (skin tone detail A) used when applying skin tone detail to ON/OFF.                      |
| <b>SKIN TONE DTL B</b> | Sets the skin color table (skin tone detail B) used when applying skin tone detail to ON/OFF.                      |
| <b>SKIN TONE DTL C</b> | Sets the skin color table (skin tone detail C) used when applying skin tone detail to ON/OFF.                      |
| <b>DETECT TBL</b>      | Selects the skin color table of the subject for which to set the skin detail.                                      |
| <b>EFFECT</b>          | Sets the effect level of skin tone detail.   |
| <b>I CENTER</b>        | Sets the center position (sets the area to which skin tone is applied) on the I axis.                              |
| <b>I WIDTH</b>         | Sets the width of the area to which skin tone is applied on the I axis using the [I CENTER] setting as the center. |
| <b>Q WIDTH</b>         | Sets the width of skin tone areas.   |
| <b>Q PHASE</b>         | Sets the phase of the area to which skin tone is applied using the Q axis as the reference.                        |

15 MATRIX

MATRIX1 / 2

TYPE

NRML1

ADAPTIVE MATRIX

OFF

R-G

0

R-B

0

G-R

0

MATRIX2 / 2

G-B

0

B-R

0

B-G

0

| Item            | Setting details  |
|-----------------|--|
| TYPE            | Selects the type of color matrix.  |
| ADAPTIVE MATRIX | Sets the function to control the linear matrix in accordance with the shooting conditions to ON/OFF. |
| R-G             | Adjusts the linear matrix between red and green.   |
| R-B             | Adjusts the linear matrix between red and blue.  |
| G-R             | Adjusts the linear matrix between green and red.   |
| G-B             | Adjusts the linear matrix between green and blue.  |
| B-R             | Adjusts the linear matrix between blue and red.  |
| B-G             | Adjusts the linear matrix between blue and green.  |

16 COLOR CORRECTION

COLOR CORRECTION1 / 8

SAT  
R

0

PHASE  
R

0

SAT  
R-R-Mg

0

PHASE  
R-R-Mg

0

COLOR CORRECTION2 / 8

SAT  
R-Mg

0

PHASE  
R-Mg

0

SAT  
Mg

0

PHASE  
Mg

0

COLOR CORRECTION3 / 8

SAT  
Mg-B

0

PHASE  
Mg-B

0

SAT  
B

0

PHASE  
B

0

COLOR CORRECTION4 / 8

SAT  
B-Cy

0

PHASE  
B-Cy

0

SAT  
Cy

0

PHASE  
Cy

0

COLOR CORRECTION5 / 8

SAT  
Cy-G

0

PHASE  
Cy-G

0

SAT  
G

0

PHASE  
G

0



| COLOR CORRECTION               |                                | 6 / 8 |
|--------------------------------|--------------------------------|-------|
| SAT<br>G-YI                    | PHASE<br>G-YI                  |       |
| <input type="text" value="0"/> | <input type="text" value="0"/> |       |
| SAT<br>G-YI-YI                 | PHASE<br>G-YI-YI               |       |
| <input type="text" value="0"/> | <input type="text" value="0"/> |       |

| COLOR CORRECTION               |                                | 7 / 8 |
|--------------------------------|--------------------------------|-------|
| SAT<br>YI                      | PHASE<br>YI                    |       |
| <input type="text" value="0"/> | <input type="text" value="0"/> |       |
| SAT<br>YI-YI-R                 | PHASE<br>YI-YI-R               |       |
| <input type="text" value="0"/> | <input type="text" value="0"/> |       |

| COLOR CORRECTION               |                                | 8 / 8 |
|--------------------------------|--------------------------------|-------|
| SAT<br>YI-R                    | PHASE<br>YI-R                  |       |
| <input type="text" value="0"/> | <input type="text" value="0"/> |       |
| SAT<br>YI-R-R                  | PHASE<br>YI-R-R                |       |
| <input type="text" value="0"/> | <input type="text" value="0"/> |       |

| Item                | Setting details  |
|---------------------|--|
| <b>SAT R</b>        | Adjusts the saturation of red.                                       |
| <b>PHASE R</b>      | Adjusts the phase of red.  |
| <b>SAT R-R-Mg</b>   | Adjusts the saturation of the color with a 3:1 red to magenta ratio. |
| <b>PHASE R-R-Mg</b> | Adjusts the phase of the color with a 3:1 red to magenta ratio.      |
| <b>SAT R-Mg</b>     | Adjusts the saturation of the color between red and magenta.         |
| <b>PHASE R-Mg</b>   | Adjusts the phase of the color between red and magenta.              |
| <b>SAT Mg</b>       | Adjusts the saturation of magenta.                                   |
| <b>PHASE Mg</b>     | Adjusts phase of magenta.  |
| <b>SAT Mg-B</b>     | Adjusts the saturation of the color between magenta and blue.        |
| <b>PHASE Mg-B</b>   | Adjusts the phase of the color between magenta and blue.             |
| <b>SAT B</b>        | Adjusts the saturation of blue.                                      |
| <b>PHASE B</b>      | Adjusts the phase of blue.   |
| <b>SAT B-Cy</b>     | Adjusts the saturation of the color between blue and cyan.           |
| <b>PHASE B-Cy</b>   | Adjusts the phase of the color between blue and cyan.                |
| <b>SAT Cy</b>       | Adjusts the saturation of cyan.                                      |
| <b>PHASE Cy</b>     | Adjusts the phase of cyan.   |
| <b>SAT Cy-G</b>     | Adjusts the saturation of the color between cyan and green.          |
| <b>PHASE Cy-G</b>   | Adjusts the phase of the color between cyan and green.               |
| <b>SAT G</b>        | Adjusts the saturation of green.                                     |
| <b>PHASE G</b>      | Adjusts phase of green.  |
| <b>SAT G-YI</b>     | Adjusts the saturation of the color between green and yellow.        |

| Item                 | Setting details   |
|----------------------|---|
| <b>PHASE G-YI</b>    | Adjusts the phase of the color between green and yellow.              |
| <b>SAT G-YI-YI</b>   | Adjusts the saturation of the color with a 1:3 green to yellow ratio. |
| <b>PHASE G-YI-YI</b> | Adjusts the phase of the color with a 1:3 green to yellow ratio.      |
| <b>SAT YI</b>        | Adjusts the saturation of yellow.                                     |
| <b>PHASE YI</b>      | Adjusts the phase of yellow.  |
| <b>SAT YI-YI-R</b>   | Adjusts the saturation of the color with a 3:1 yellow to red ratio.   |
| <b>PHASE YI-YI-R</b> | Adjusts the phase of the color with a 3:1 yellow to red ratio.        |
| <b>SAT YI-R</b>      | Adjusts the saturation of the color between yellow and red.           |
| <b>PHASE YI-R</b>    | Adjusts the phase of the color between yellow and red.                |
| <b>SAT YI-R-R</b>    | Adjusts the saturation of the color with a 1:3 yellow to red ratio.   |
| <b>PHASE YI-R-R</b>  | Adjusts the phase of the color with a 1:3 yellow to red ratio.        |

## 17 IRIS RELATIVE

For details on operations and settings, refer to the following section in the Operating Instructions.

➡ “29 IRIS RELATIVE”

## 18 SYSTEM CAM

SYSTEM CAM1 / 1

CONTROL

OFF

TALLY INPUT

CAM1

SIGNAL

OFF

TALLY CONT MD

SELECT

| Item          | Setting details  |
|---------------|--|
| TALLY CONTROL | Sets whether or not to notify the camera when there is a tally input from the <PREVIEW> connector.                           |
| TALLY INPUT   | Sets the camera to be notified of a tally input when [TALLY CONTROL] is set to "ON".   |
| TALLY SIGNAL  | Displays the status of the tally input to the unit. "ON" is displayed when there is input, and "OFF" when there is no input. |
| TALLY CONT MD | Sets the control method for when a tally is input to the unit.   |

## 19 CAMERA MENU CONTROL

CAMERA MENU CONTROL1 / 1

MENU ON/OFF

OFF

CURSOR/ PARAMETER

(turn)

EXECUTE

(push)

MENU EXIT

(push)

| Item             | Setting details                                  |
|------------------|--|
| MENU ON/OFF      | Sets the camera menu to ON/OFF.                  |
| CURSOR/PARAMETER | Moves the menu cursor or changes setting values. |
| EXECUTE          | Selects a menu or confirms changed parameters.   |
| MENU EXIT        | Returns to the menu above the displayed menu.    |

## 20 ROP SETTING

For details on operations and settings, refer to the following section in the Operating Instructions.

➡ “37 ROP SETTING”

### NOTE

- Only “ABS” can be set for [IRIS LEV MODE].

## 21 CONNECT SETTING

**CONNECT SETTING** 1 / 17

---

**CONNECT MODE(push)**

|                     |             |             |
|---------------------|-------------|-------------|
| CAM1<br>LAN<br>(AG) | CAM2<br>NON | CAM3<br>NON |
|---------------------|-------------|-------------|

---

**CONNECT MODE(push)**

|             |             |             |
|-------------|-------------|-------------|
| CAM4<br>NON | CAM5<br>NON | CAM6<br>NON |
|-------------|-------------|-------------|

**CONNECT SETTING** 2 / 17

---

**CONNECT MODE(push)**

|             |             |             |
|-------------|-------------|-------------|
| CAM7<br>NON | CAM8<br>NON | CAM9<br>NON |
|-------------|-------------|-------------|

---

**CONNECT MODE(push)**

|              |              |              |
|--------------|--------------|--------------|
| CAM10<br>NON | CAM11<br>NON | CAM12<br>NON |
|--------------|--------------|--------------|



**CONNECT SETTING** 17 / 17

---

**CONNECT MODE(push)**

|              |              |              |
|--------------|--------------|--------------|
| CAM97<br>NON | CAM98<br>NON | CAM99<br>NON |
|--------------|--------------|--------------|

| Item                                    | Setting details   |
|---|---|
| <b>CONNECT MODE(push) CAM1</b>          | Sets the connection method for camera 1.<br>After configuring the settings, press the menu operation dial to apply the settings.        |
| <b>CONNECT MODE(push) CAM2 to CAM99</b> | Sets the connection method for cameras 2 to 99.<br>After configuring the settings, press the menu operation dial to apply the settings. |

### NOTE

- When connecting the unit with the AG-CX350, set this to “LAN(AG)”.

## 22 ROP IP SETTING

For details on operations and settings, refer to the following section in the Operating Instructions.


➡ “39 ROP IP SETTING”

## 23 CAMERA IP SETTING

For details on operations and settings, refer to the following section in the Operating Instructions.

➡ “40 CAMERA IP SETTING”

## 24 AUTO IRIS SETTING

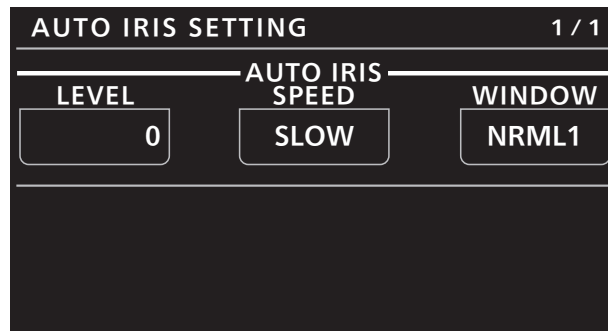

| Item             | Setting details                                   |
|------------------|---|
| AUTO IRIS LEVEL  | Sets the auto iris level.                         |
| AUTO IRIS SPEED  | Sets the control speed of the auto iris function. |
| AUTO IRIS WINDOW | Selects the auto iris detection window.           |

## 25 SWITCHER LINK

For details on operations and settings, refer to the following sections in “Functions Added by Version Updates”.

➡ “Functions Linking with AV-HS6000”

## 26 AW CONTROLLER LINK

For details on operations and settings, refer to the following sections in “Functions Added by Version Updates”.

➡ “Functions Linking with AW-RP150”