

List of Supported Functions


When you connect and use this unit with the AW-UE150/AW-UE100 4K Integrated Camera, the functionality of some of the unit's buttons and dials will be limited or disabled. Please see the chart below.

NOTE

- To connect with the AW-UE150 and AW-UE100, set [CAMERA TYPE(CNTRL TYPE)] on the screen of the [Camera List] tab in ROP Setup Software to the following.
 AW-UE150: Network(AW4)
 AW-UE100: Network(AW5)

Front panel 1


✓: Enabled ×: Disabled △: Enabled under certain conditions

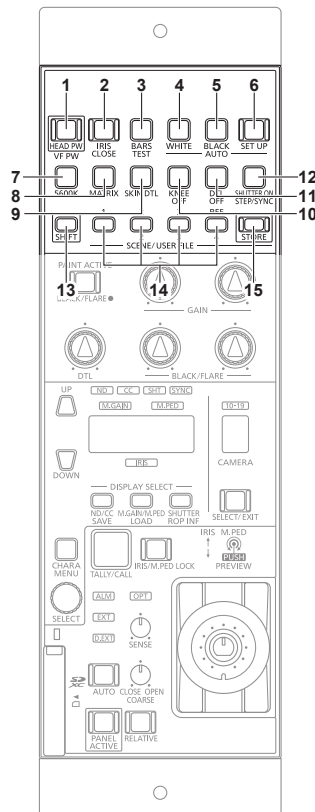

No.	Button name	Link with AW-UE150/ AW-UE100	Notes
1	[HEAD PW/VF PW] button	△	Only on/off of the camera power will function.
2	[IRIS CLOSE] button	×	
3	[BARS/TEST] button	△	Only on/off of the color bar signal will function.
4	[AUTO WHITE] button	✓	
5	[AUTO BLACK] button	✓	
6	[AUTO SET UP] button	×	
7	[5600K] button	△	When this button is turned off, "White Balance Mode" returns to the setting before it was turned on. However, if this button is turned off when the setting was "5600K" at startup, the setting will become "AWB A".
8	[MATRIX] button	✓	Functions as on/off of the "Adaptive Matrix".
9	[SKIN DTL] button	✓	
10	[KNEE OFF] button	×	This is always lit.
11	[DTL OFF] button	✓	
12	[SHUTTER ON] (STEP/SYNC) button	✓	
13	[SHIFT] button	✓	
14	[1]/[2]/[3]/[4] (SCENE/USER FILE) buttons	△	Only the scene files can be selected.
15	[STORE] button	×	

■ Front panel 2


✓: Enabled ×: Disabled △: Enabled under certain conditions

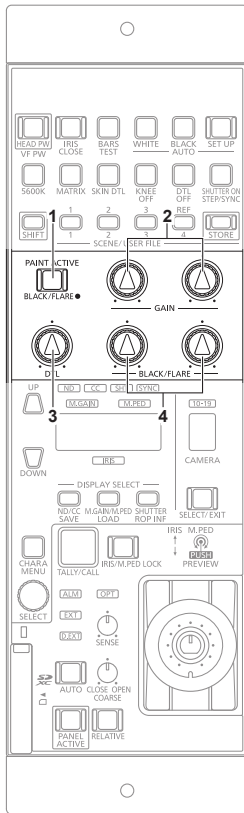

No.	Button name	Link with AW-UE150/ AW-UE100	Notes
1	[BLACK/FLARE] (PAINT ACTIVE) button	△	Only the pedestal can be adjusted.
2	[GAIN] dials (red and blue)	✓	
3	[DTL] dial	✓	
4	[BLACK/FLARE] dials (red and blue)	△	Only the pedestal can be adjusted.

■ Front panel 3


✓: Enabled ×: Disabled △: Enabled under certain conditions

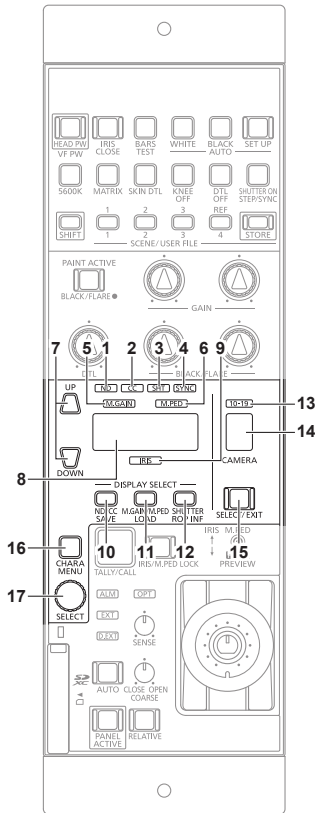

No.	Button name	Link with AW-UE150/ AW-UE100	Notes
1	[ND] indicator	✓	
2	[CC] indicator	×	
3	[SHT] indicator	✓	
4	[SYNC] indicator	✓	
5	[M.GAIN] indicator	✓	
6	[M.PED] indicator	✓	
7	[UP/DOWN] buttons	✓	Operates the zoom and focus of the lens during “ZOOM” and “FOCUS” operation.
8	Adjustment value display	✓	
9	[IRIS] indicator	✓	
10	[ND/CC] (SAVE) button	△	<p>When you press this button repeatedly, the operation target switches in the order of ND filter → ZOOM → FOCUS → AUTO FOCUS → ND filter.</p> <p>For “ZOOM” and “FOCUS”, operate the zoom and focus of the lens with the [UP/DOWN] buttons and adjust the speed value with the [SELECT] dial. The display on the adjustment value display is as follows. ZOOM: Z_0^{**} FOCUS: F_0^{**} (**: Speed value)</p> <p>Turn “AUTO FOCUS” on/off with the [UP/DOWN] buttons or [SELECT] dial. The display on the adjustment value display is as follows. ON: AF.on OFF: AF.oF</p> <p>Only the following operations will function for the SAVE menu.</p> <ul style="list-style-type: none"> • Saving a connection configuration file • Saving a unit ROP configuration file • Formatting a memory card
11	[M.GAIN/M.PED] (LOAD) button	△	<p>Only the following operations will function for the LOAD menu.</p> <ul style="list-style-type: none"> • Loading a connection configuration file • Loading a unit ROP configuration file • Updating the software of the unit • Formatting a memory card

■ Front panel 3 (continued)


✓: Enabled ×: Disabled △: Enabled under certain conditions

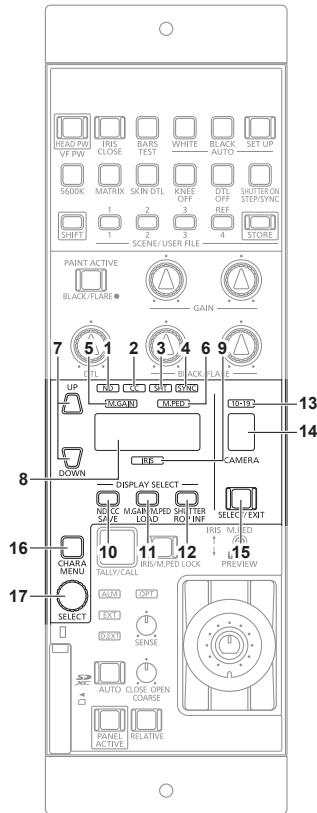

No.	Button name	Link with AW-UE150/ AW-UE100	Notes
12	[SHUTTER] (ROP INF) button	✓	
13	[10 -19] indicator	✓	
14	Camera control number display	✓	
15	[SELECT/EXIT] button	✓	
16	[CHARA/MENU] button	△	Only on/off of the camera menu by pressing and holding down will function. Operation of the camera menu is performed with the [SELECT] dial.
17	[SELECT] dial	✓	When the camera menu is displayed: Operates the camera menu. When operating "ZOOM" and "FOCUS": Adjusts the speed value. When operating "AUTO FOCUS": Sets on/off. When the camera menu is displayed, operation of the camera menu is given priority. To use for another operation, set display of the camera menu to off with the [CHARA/MENU] button.

■ Front panel 4

✓: Enabled ×: Disabled △: Enabled under certain conditions

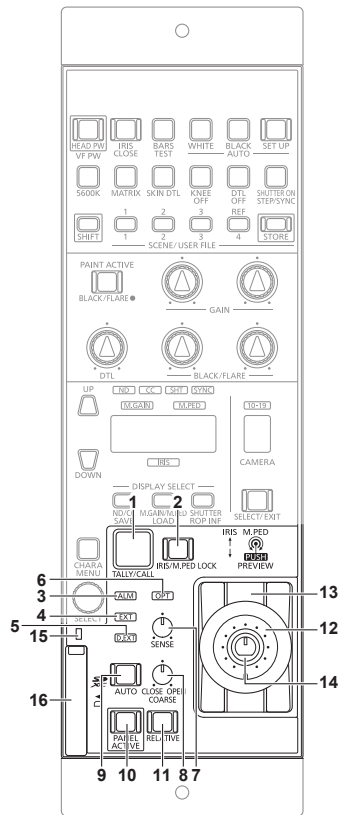

No.	Button name	Link with AW-UE150/ AW-UE100	Notes
1	[TALLY/CALL] button	△	Only tally (red/green) display functions.
2	[IRIS/M.PED LOCK] button	✓	
3	[ALM] indicator	✓	
4	[EXT] indicator	×	
5	[D.EXT] indicator	✓	
6	[OPT] indicator	×	
7	[SENSE] dial	✓	
8	[COARSE] dial	✓	
9	[AUTO] button	✓	
10	[PANEL ACTIVE] button	✓	
11	[RELATIVE] button	✓	
12	[M.PED] dial	✓	
13	[IRIS] lever	✓	
14	[PREVIEW] button	✓	
15	Memory card access indicator	✓	
16	Memory card slot	✓	