Firmware Update

This manual is to explain the procedure for updating the AU-XPD1 firmware on Windows.

Operating Environment

Please perform this update for AU-XPD1 in the following environment.

OS :

Windows 7 Professional, Ultimate (SP1) 32bit/64bit Windows 8 32bit/64bit Windows 8.1 32bit/64bit

Preparation before Updating

Before updating the AU-XPD1 firmware, please make sure of the following points.

<Firmware Download>


- Download AU-XPD1 latest firmware update file "VSI6108A.zip" for Windows from the website below and put it in any folder in your PC.
 http://pro-av.panasonic.net/en/ -> Service and Support -> Software Download -> P2
- If your PC is connected with two or more AU-XPD1 memory card drives, the update cannot be performed correctly. Be sure to perform the update with only one AU-XPD1 drive connected.
- · Disable the standby / hibernate setting of your PC.
- If P2 cards are in the slots of AU-XPD1, take them all out.
- AU-XPD1 require the power supply with USB3.0 or AC Adaptor.

Firmware Update Procedure

* Update must be performed by a user with administrator rights.

- 1. Double-click the downloaded "VSI6108A.zip" file to extract it, and the "VSI6108A" folder will appear. So copy this folder to an appropriate location.
- Double-click the "Xpd1UpdateTo105.exe" file in the "VSI6108A" folder to start the update. On Windows 7 and Windows 8, the confirmation dialog for access request will be displayed. So click [OK] to proceed.

If the message "Windows protected your PC" appears in Windows 8/8.1, click "More info" and select "Run anyway" on next page.

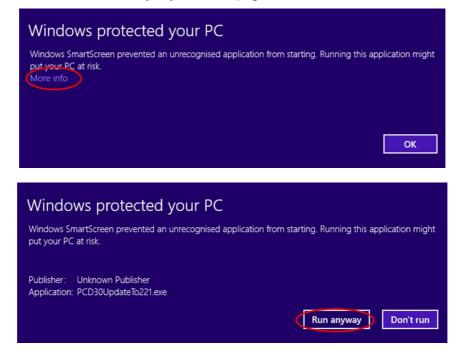

When AU-XPD1 is recognized correctly, following screen is displayed. Please proceed to the next step. (Version numbers below are for reference purposes only.)

AU-XPD1 Update Tool 🛛 🗕 🗆 🗙			- 🗆 🗙
STEP1: Change Operating Mode STEP2: Update Data File 1	Current Version Update Version	1.02 1.05	Execute
STEP3: Update Data File 2	Click Execute to	perform ve	ersion update.
STEP4: Update Data File 3			
STEP5: Device Restart			
STEP6: Version Update Completed			

If the screen is displayed as follows, AU-XPD1 is not recognized. Please check the connection with PC again.

AU-XPD1 Update Tool – 🗆 🗙			
STEP1: Change Operating Mode	Current Version		Execute
STEP2: Update Data File 1	Update Version	1.05	Execute
STEP3: Update Data File 2	Please connect A	V-XPD1 wit	h USB cable.
STEP4: Update Data File 3			
STEP5: Device Restart			
STEP6: Version Update Completed			

3. Click the [Execute] button to start the update.

It takes about a few minutes to complete the update.

- * Once the update is started, it cannot be canceled in the middle of the process.
- * While the update is in progress, please do not turn off your PC or AU-XPD1, or unplug USB cable.

* When the AU-XPD1 indicates disconnection for a few seconds, this state is proceeding normally. It does not indicate problems.

AU-XPD1 Update Tool – 🗆 🗙			
STEP1: Change Operating Mode STEP2: Update Data File 1	Current Version Update Version	^{×.**} 1.05	Execute
STEP3: Update Data File 2	Performing versi	on update.	
STEP4: Update Data File 3	Do not remove th	ne USB cable	e.
STEP5: Device Restart			
STEP6: Version Update Completed			

4. When the update is completed, the following screen will be displayed as below.

AU-XPD1 Update Tool 🛛 🗕 🗆 🗙			- 🗆 🗙
STEP1: Change Operating Mode STEP2: Update Data File 1	Current Version Update Version	1.05 1.05	Execute
STEP3: Update Data File 2 STEP4: Update Data File 3	AU-XPD1 software is the latest version. Please close this application.		
STEP5: Device Restart			
STEP6: Version Update Complete			

5. With these steps, the update will be completed.

Confirmation of Firmware Version

When you need to confirm that AU-XPD1 has been correctly updated, please execute the "Xpd1UpdateTo105.exe" file again.

If it has been updated correctly, the following screen will be displayed.

AU-XPD1 Update Tool – 🗆 🗙			
STEP1: Change Operating Mode STEP2: Update Data File 1	Current Version Update Version	1.05 1.05	
STEP3: Update Data File 2 STEP4: Update Data File 3	AU-XPD1 software is the latest version. Please close this application.		
STEP5: Device Restart STEP6: Version Update Complete			

If it has not been updated correctly, please perform the update from the beginning again.

Error While Updating

If an error occurs for some reason while updating, a message such as the following will be displayed in the window and the update process will be stopped.

- + Cannot communicate with AU-XPD1. Ending process.
- + Error during version update, Ending process.
- + File transfer failed. Ending process.
- + File write failed. Ending process.

If the update is stopped, please follow the procedure below to perform the update again.

- 1. Press button at the upper right of the window to terminate updating.
- 2. After turning your PC off, turn AU-XPD1 off and on again. Then restart your PC.
- 3 . Double-click the "Xpd1UpdateTo105.exe" file to start the application.
- 4. After it is confirmed that AU-XPD1 is recognized, press the Execute button to perform the update.

When the following symptoms occur, please contact your nearest service center.

- AU-XPD1 is not recognized.
- The update is not completed correctly even if you have retried several times.