

PT-RZ12K/RS11K series Main firmware update Procedure

Applicable models

PT-RZ12K, PT-RS11K,
PT-RZ12KD, PT-RS11KD,
PT-SRZ12KC, PT-SRS11KC

(This is display sample)

| STATUS | | 1/5 |
|----------------------|---------------------|------|
| PROJECTOR TYPE | RZ12K(123456789012) | |
| PROJECTOR RUNTIME | 100000h | |
| LIGHT RUNTIME | 100000h / 100000h | |
| MAIN SUB VERSION | 1.06 / 1.00 | |
| INTAKE AIR TEMP. | 31°C/87°F | |
| OPTICS MODULE TEMP. | 27°C/80°F | |
| EXHAUST AIR TEMP. | 31°C/87°F | |
| AROUND LIGHT1 TEMP. | 31°C/87°F | |
| AROUND LIGHT2 TEMP. | 31°C/87°F | |
| COOLING CONDITION | AUTO - FLOOR | |
| ATMOSPHERIC PRESSURE | 1013hPa | |
| SELF TEST | NO ERRORS | |
| ENTER | SEND E-MAIL | |
| ◀▶ | CHANGE | EXIT |

1. Checking the Main firmware version

1-1. Checking procedure

1. When the projector is turned on and the image is projected, press the <STATUS> button on the remote control.
2. Press ◀▶ to switch the page to the first page.
3. Confirm the "MAIN VERSION".

2. Preparation

About Firmware update

The firmware update can be performed by "Wired LAN cable connection".

2-1. Requirements for update

The condition bellow is required for update.

• A computer that meets the following criteria

Successful update is not guaranteed for all computers that satisfies the requirements below.

OS: Microsoft Windows® 10

Windows® 10 Pro 32bit/64bit, Windows® 10 32bit/64bit

Microsoft Windows® 8.1

Windows® 8.1 Pro 32bit/64bit, Windows® 8.1 32bit/64bit

Microsoft Windows® 7

Ultimate 32bit/64bit SP1, Professional 32bit/64bit SP1, Home Premium 32bit/64bit SP1

CPU: Required speed for the operating system or higher.

RAM: Required size for the operating system or bigger.

Others: LAN terminal (RJ-45)

Display :1024 x 768 pixel, High Color (16bit) or high resolution

- Successful update is not guaranteed without the required system or with a self-built computer.
- Microsoft®, Windows® is registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

• LAN cable (Straight or Cross type *)

* About cable type, refer to the "3-1 Connection".

[Note] The following conditions may cause the failure of the firmware updating.

Please retry after changing the software setting or the [Power option] setting.

- Any security (firewall) or LAN adapter software are installed to the computer.
- Other application software that starts and runs during updating.
- Some combination of the setting of the [Power option] setting for windows®.
- "Resume mode" or "Suspend mode" start while updating.

2-2. Preparation for Firmware


1. Download "Firmware update tool for PT-RZ12K/RS11K series" from PASS Website below.
 - "FirmUpdateTool_xxxxxxx.zip" file (for example :FirmUpdateTool_rz12kv107.zip)

<PASS Website> <https://panasonic.net/cns/projector/pass/>
2. Unzip the downloaded "Firmware update tool".

3. Connection and Communication setting

3-1. Connection

1. Connect the projector and computer with "LAN cable".

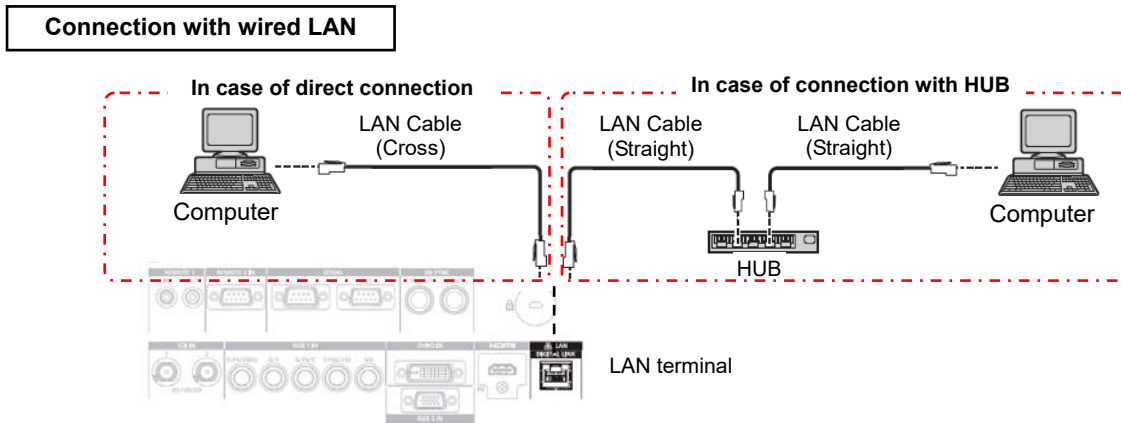

3-2. Communication setting

1. Open the menu of the projector and confirm the communication setting as below.
2. Set the [STAND BY] to "NORMAL".

Updating with wired LAN


| MENU | | ITEM |
|--|-------------------|-------------------|
| [PROJECTOR SETUP] | [STANDBY MODE] | NORMAL |
| [NETWORK] | [NETWORK SETUP] | [PROJECTOR NAME] |
| | | [DHCP] |
| | | [IP ADDRESS] |
| | | [SUBNET MASK] |
| | | [DEFAULT GATEWAY] |
| | | [STORE] |
| | [NETWORK CONTROL] | [COMMAND PORT] |
| User name (Administrator rights) for Network | | |
| Password for Network | | |

[Note] Please return these settings to the original value after updating.

4. Main firmware Update Operation


1. Double click the **“FirmUpdateTool_xxxxxxx.exe”**.
“Firmware update Tool” is starts and following window will be displayed.
2. Set the projector to STAND-BY condition.
3. Confirm the connection of projector and computer.
Click the **“Next”** button.

[Note] Main firmware of PT-RZ12K/RS11K series cannot be updated by the serial terminal.

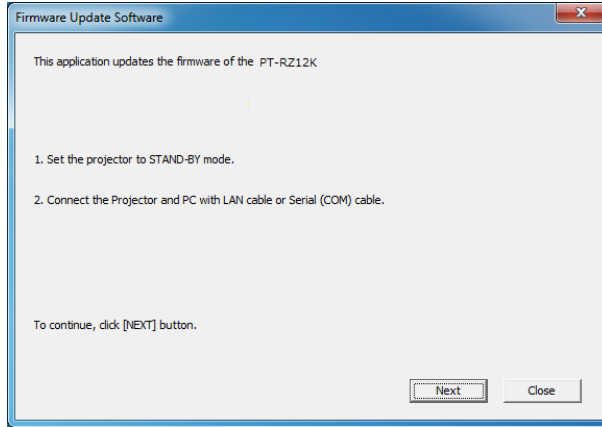

(This is display sample)

4. Following **“Licence Agreement window”** will be displayed.
Read the **“Software Licence Agreement”**.
Upon your agreement, check **[I agree]** and click the **[Next]** button.

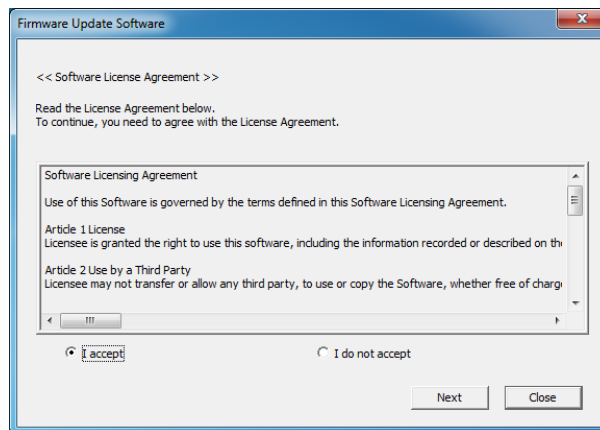


(This is display sample)

5. Following window is displayed.
Select the **“LAN Connection”** and input or set the value you confirmed at 3-2”.

Click this button for selecting **“wired LAN”**.

Input the **“IP ADDRESS”** of projector

Input the **“COMMAND PORT”** of projector

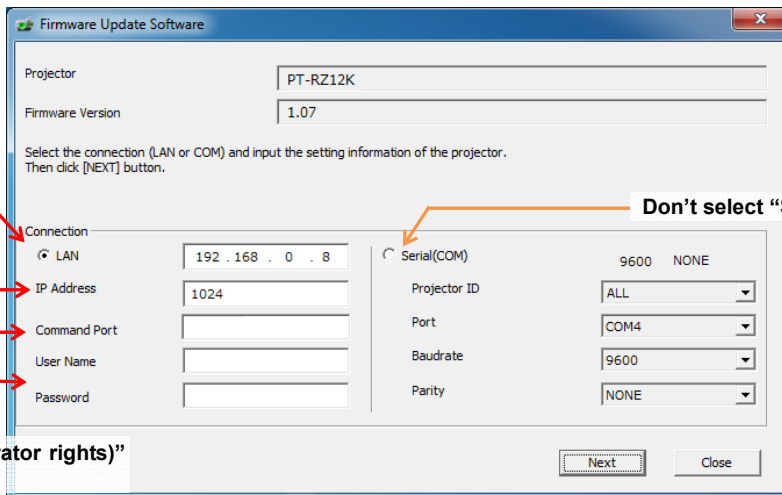


Don't select **“Serial (COM)”**.

Input **“User name (Administrator rights)”** and **“Password”** of projector.


(This is display sample)

- 6. Click the [Next] button and then the following window will be displayed.
- 7. Click the [OK] button and the firmware update will start.
 - * When any “Error message” is displayed, follow the instruction on the window.

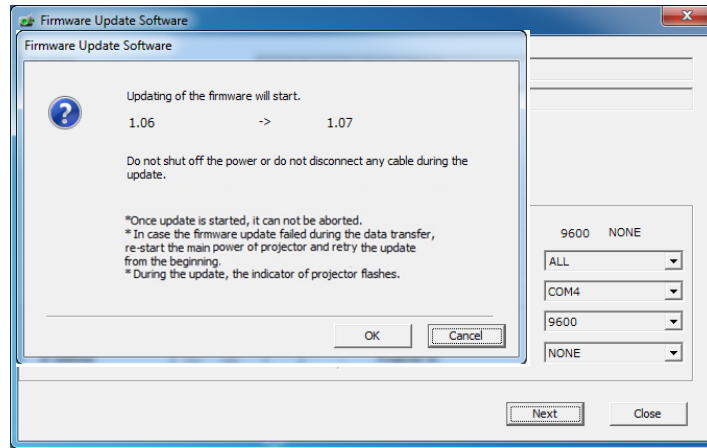


(This is display sample)

- 8. The following windows will be displayed during the firmware update.
 - Do not disconnect the connection cable or turn off the power during updating.
 - Updating time is approximately 15 minutes.
 - If the projector is shut down by power failure or other reasons during updating, re-start the main power of the projector and retry.

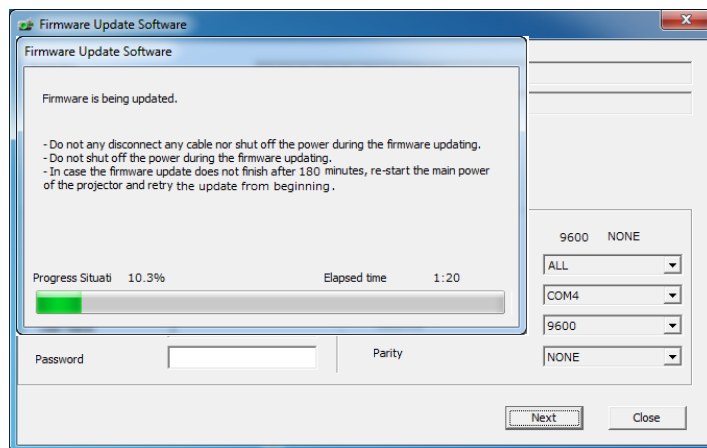

(This is display sample)

- 9. The following window will be displayed when the firmware update is completed. Click the [No] button and turn off the power of the projector. Disconnect the connection cable. When you want to continue other projector firmware update, click the “Yes” button.

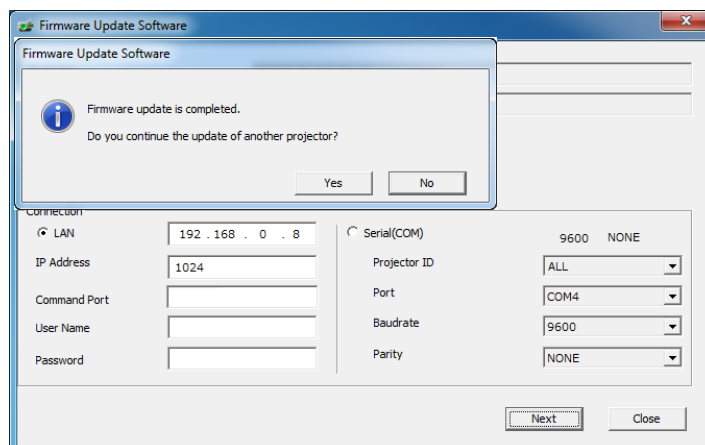

(This is display sample)

5. Confirm the update

Please check the firmware version according to the following procedure.

5-1. Main firmware checking procedure


(This is display sample)

1. When the projector is turned on and the image is projected, press the <STATUS> button on the remote control.
2. Press ◀ ▶ to switch the page to the first page.
3. Confirm that the “MAIN VERSION” value is updated.

| STATUS | | 1/5 |
|----------------------|---------------------|------|
| PROJECTOR TYPE | RZ12K(123456789012) | |
| PROJECTOR RUNTIME | 100000h | |
| LIGHT RUNTIME | 100000h / 100000h | |
| MAIN SUB VERSION | 1.07 / 1.00 | |
| INTAKE AIR TEMP. | 31°C/87°F | |
| OPTICS MODULE TEMP. | 27°C/80°F | |
| EXHAUST AIR TEMP. | 31°C/87°F | |
| AROUND LIGHT1 TEMP. | 31°C/87°F | |
| AROUND LIGHT2 TEMP. | 31°C/87°F | |
| COOLING CONDITION | AUTO - FLOOR | |
| ATMOSPHERIC PRESSURE | 1013hPa | |
| SELF TEST | NO ERRORS | |
| ENTER | SEND E-MAIL | |
| | CHANGE | EXIT |

6. Error table

[ERROR Window]

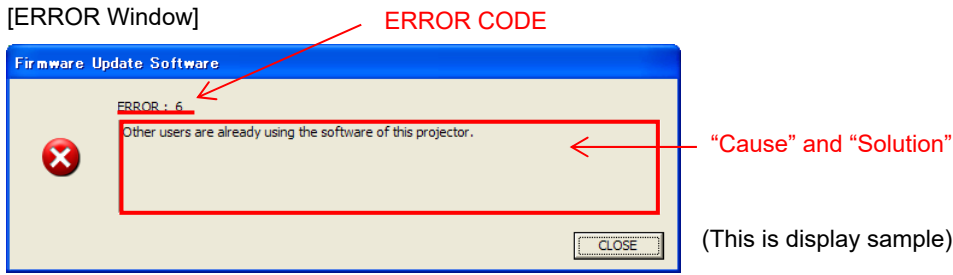

(This is display sample)

| ERROR CODE | Status | Cause | Solution |
|------------|-------------|--|---|
| 1 | - | - | - |
| 2 | ERROR | No response from the projector. | Please check the connection and setting between projector and computer. |
| 3 | ERROR | This projector is not applicable model for this application. | This application cannot update the firmware of this projector. |
| 4 | ERROR | The projector is not in stand-by mode. | Please set projector in stand-by mode. |
| 5 | ERROR | Data transfer of the firmware has been failed. | Please check the connection and setting between projector and computer. |
| 6 | ERROR | The application failed to start up. | Please restart the application after closing other running applications or rebooting the computer. |
| 7 | ERROR | This application is already run by other windows user. | This application can not be run simultaneously. |
| 8 | ERROR | Assigned serial (COM) port is being used by another application. | Please assign another serial (COM) port or close the application which uses the assigned serial (COM) port. And then please restart the update application. |
| 9 | INFORMATION | The firmware of this projector is newer than the firmware of this application. | Update application is not executed. The firmware of this projector is not updated. |
| 10 | INFORMATION | The firmware of this projector is the same version as this application. | Update application is not executed. The firmware of this projector is not updated. |
| 11 | ERROR | User ID or Password of projector is incorrect. | Please input correct User ID and Password. |
| 12 | ERROR | Failure has occurred in the updating process. | Please restart the application after closing other running applications or rebooting the computer. |
| 13 | ERROR | Assigned command port is being used by another application. | Please assign another command port or close the application which uses the assigned command port. And then please restart the update application. |